

CILICON⁺

EDGE 3

User Manual

2.0mL

Disposable



Specifications


Dimension(mm)	92.7H*23.5W*12D
Tank Material	Food Grade PCTG
Central Post	Medical-Grade SUS316L Stainless Steel
Battery Housing	Aluminum Alloy
Output Power	High: 7.7W / Low: 6.0W
Resistance	1.5Ω
Battery Capacity	290mAh
Charging	USB Type-C
Activation	Button Activated
Tip Type	Snap In



Filling Instruction


CILICON⁺

1

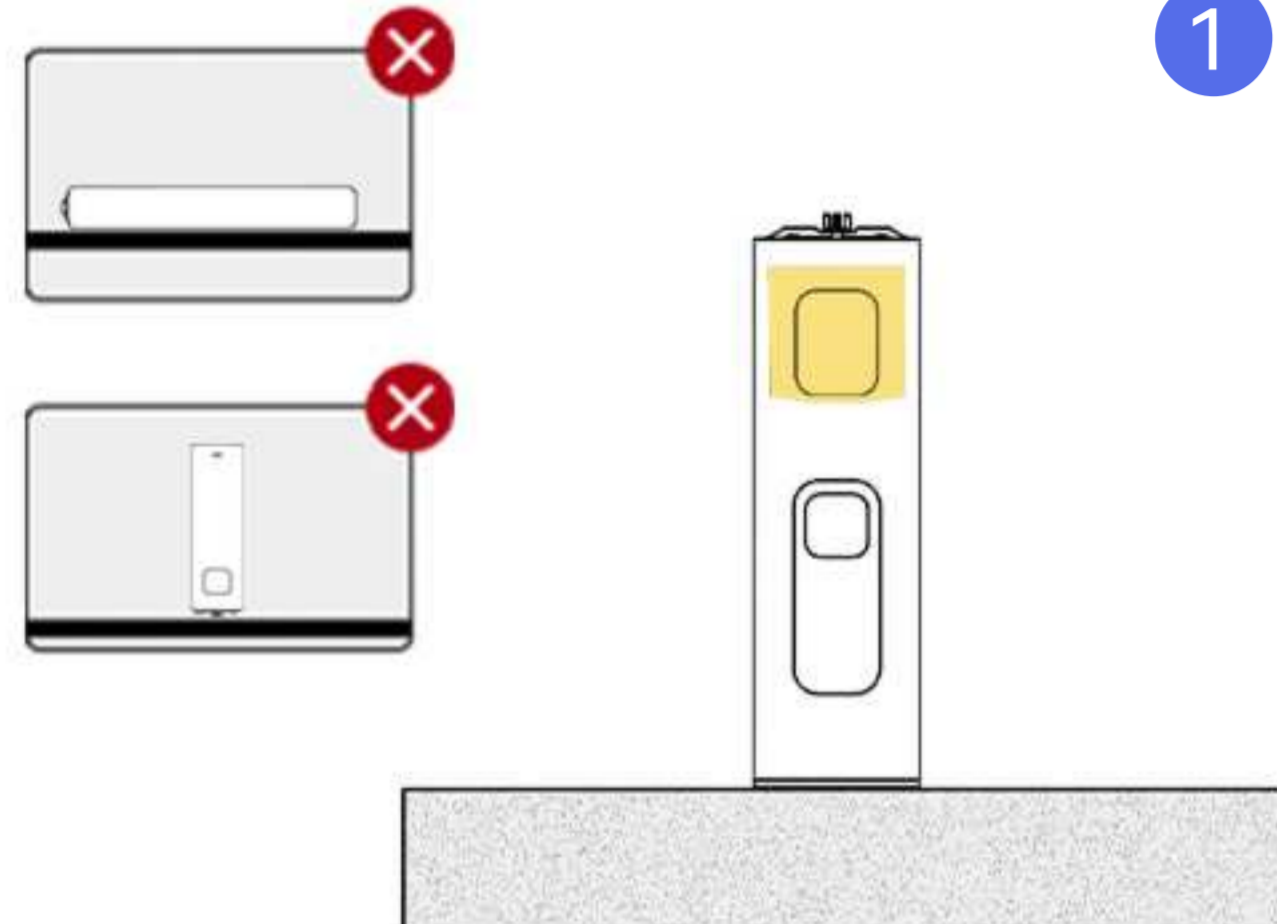


- Unpackge the cartridge and make sure it is vertically upright with the tray.

2

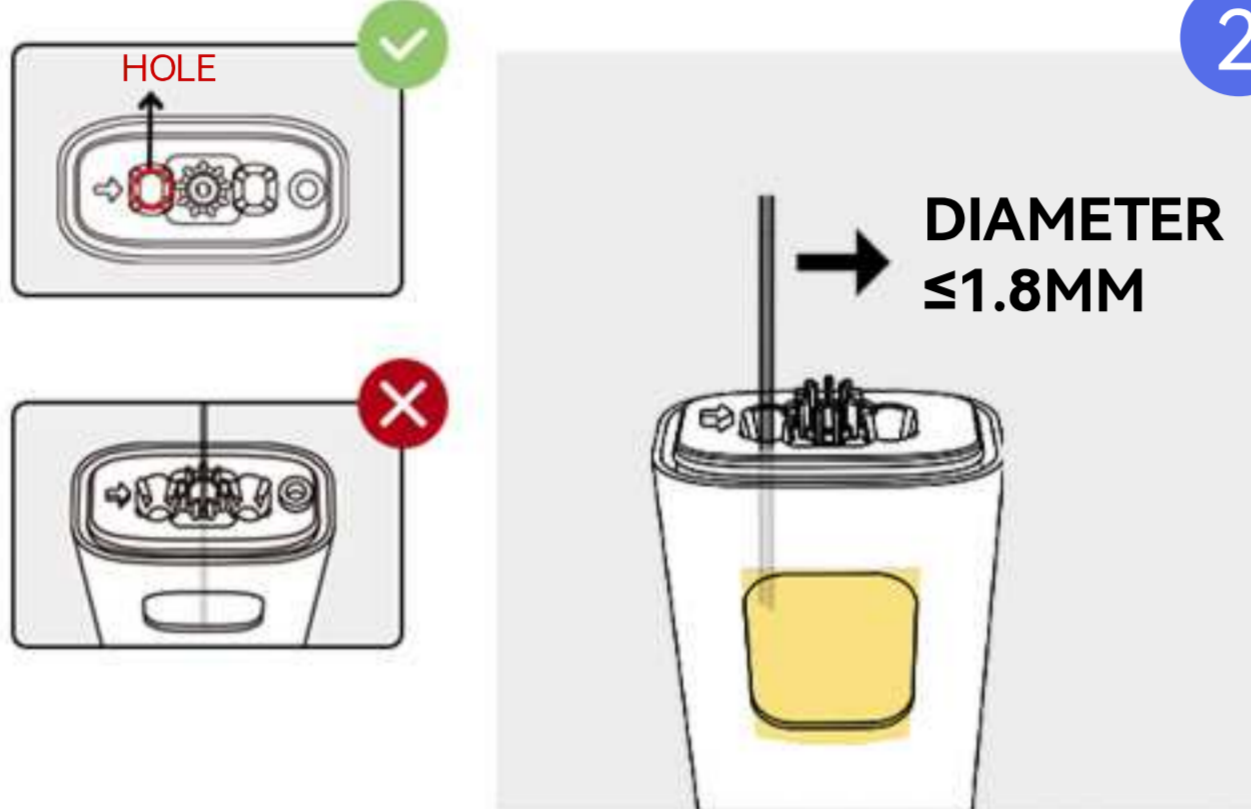


- Do not unplug the silicone cap when filling the oil.
- Insert the needle vertically into the filling hole, and do not insert it into the central post.
- Make sure the needle diameter is $\leq 1.8\text{mm}$.

3

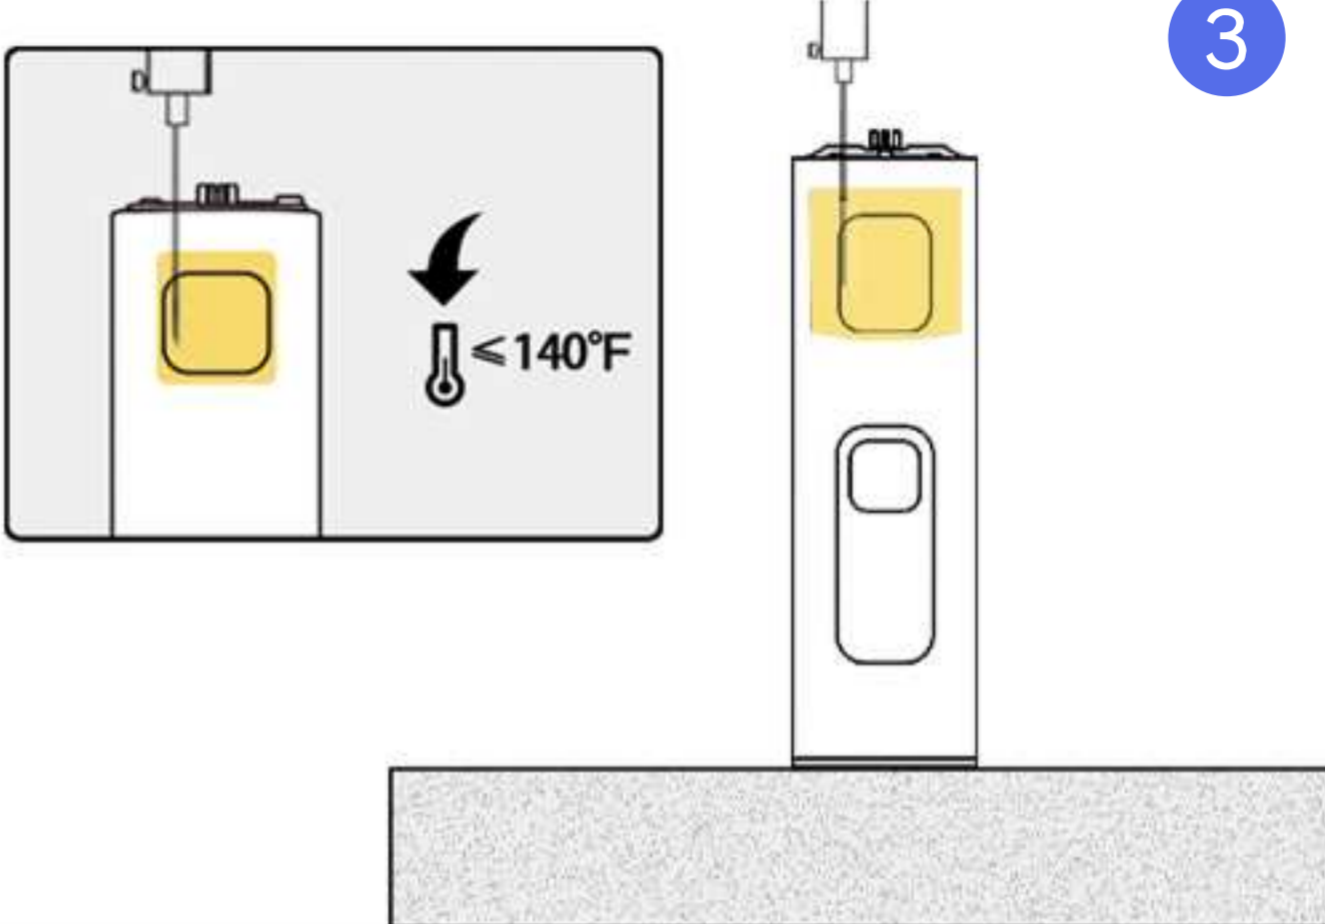


- The output temperature must be under 140°F.

4

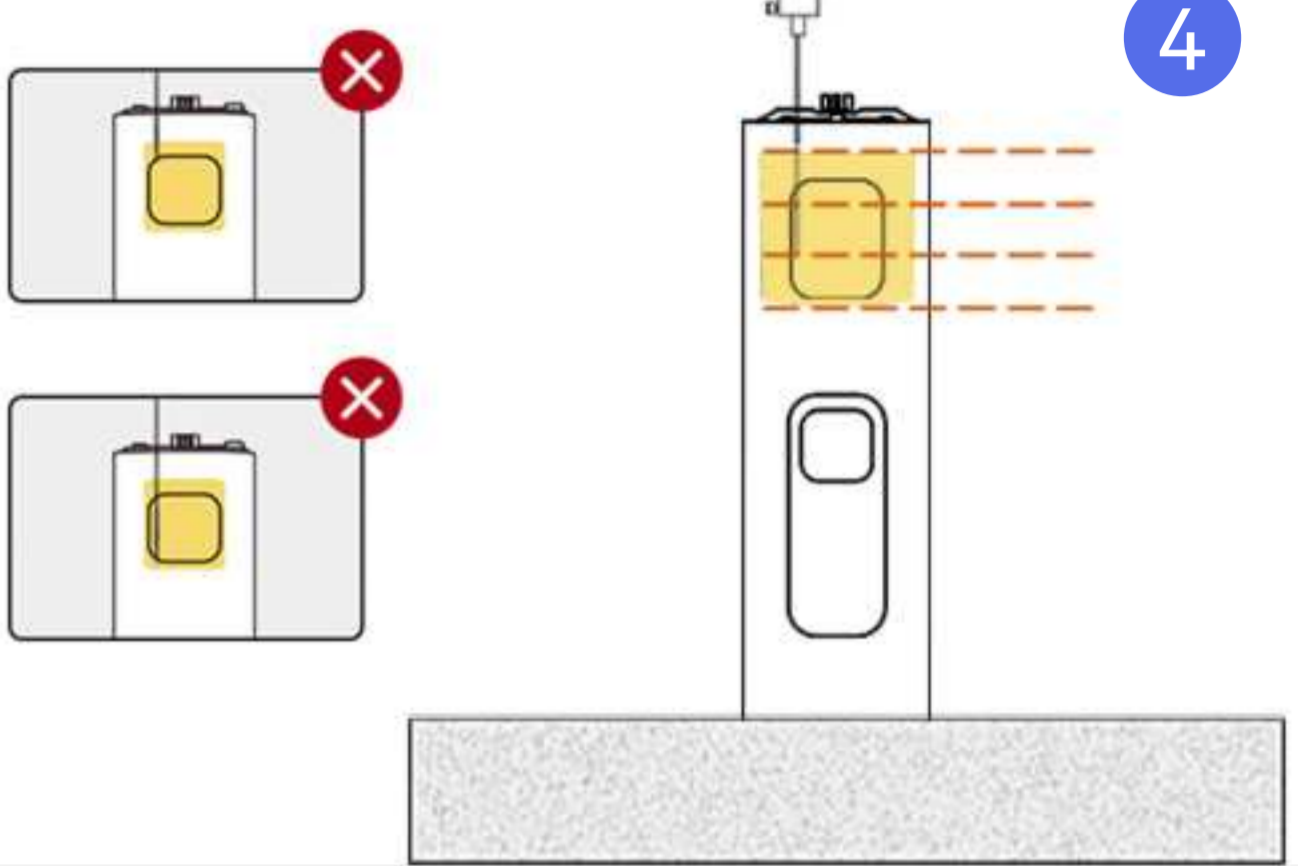


- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank
- Fill in 1.95-2.0mL for this device.

5

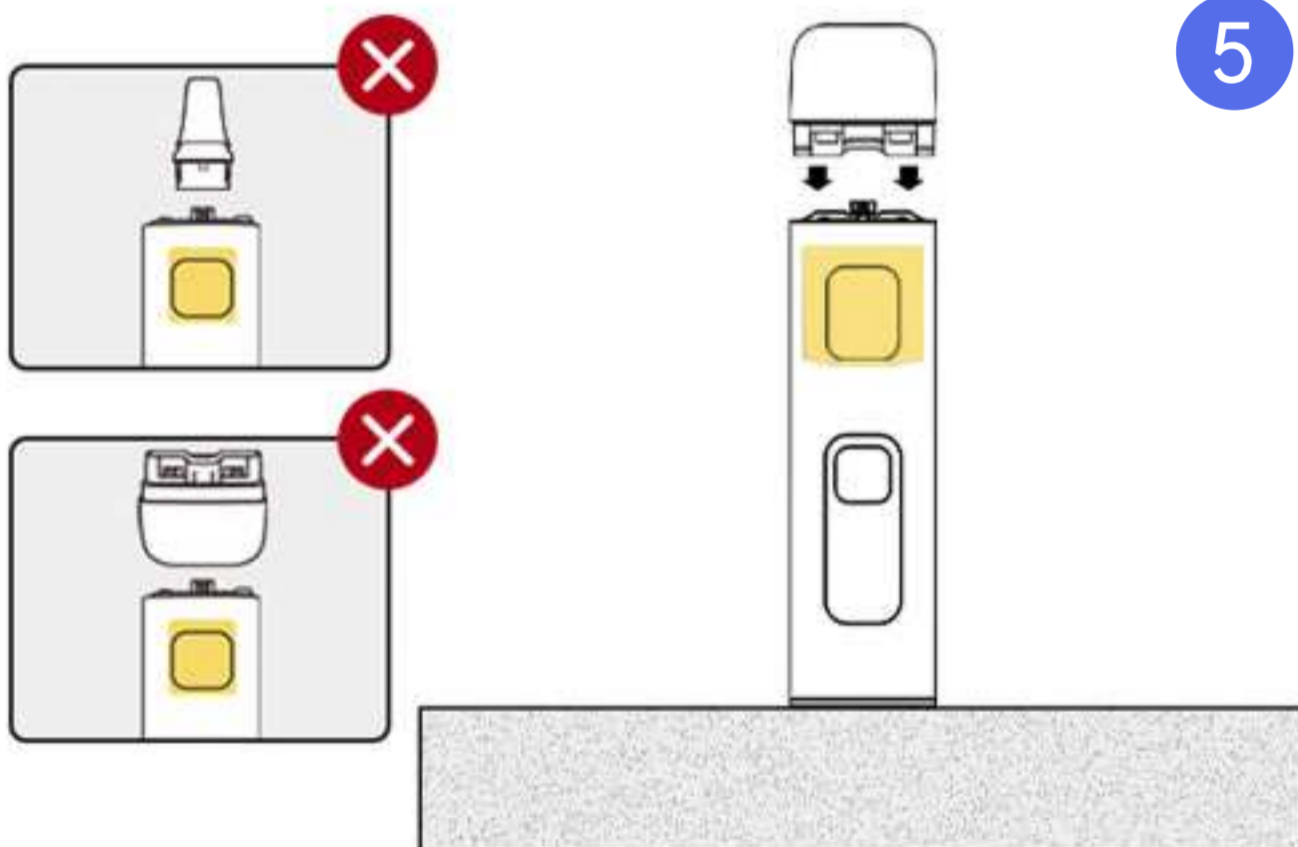


- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.

6

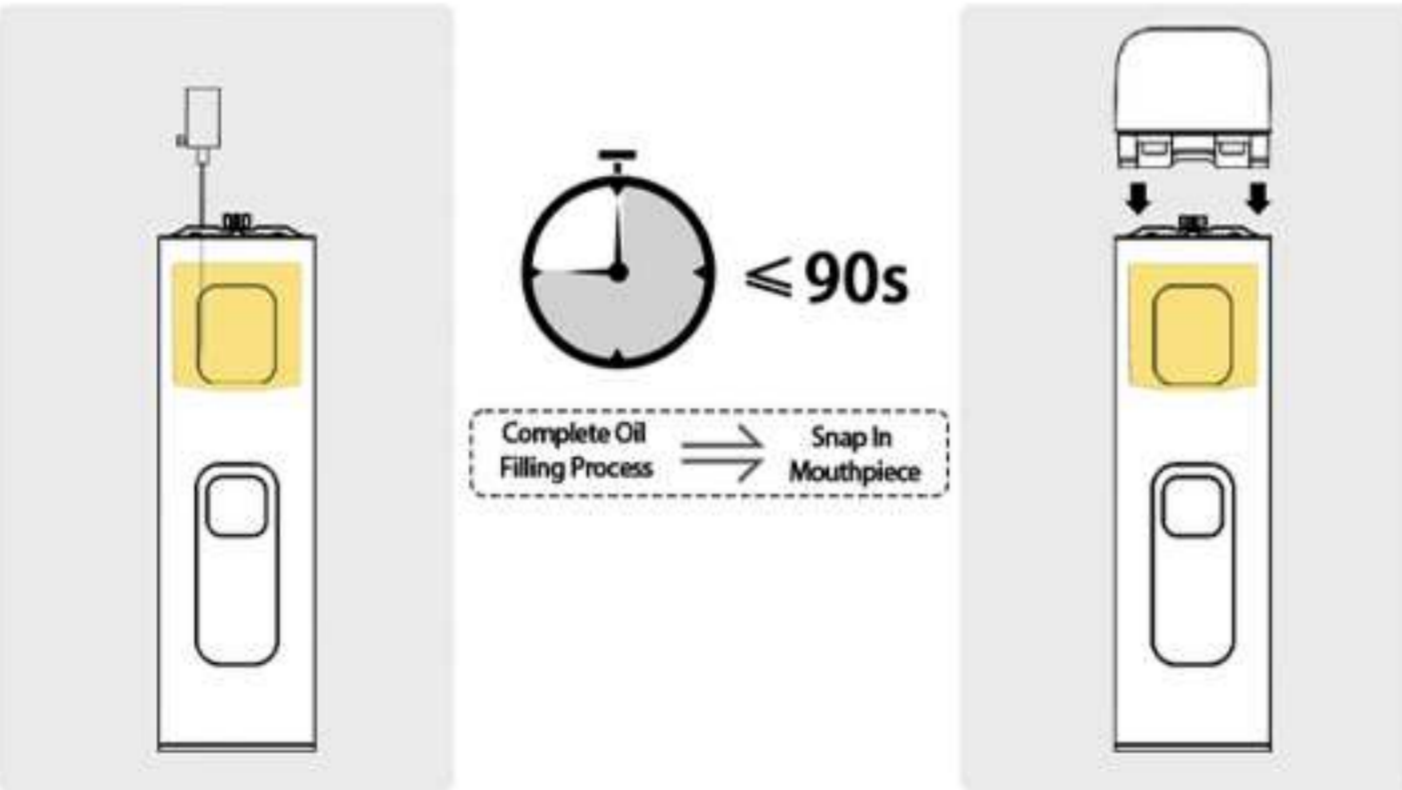


- Complete the snapping process within 90s after filling the oil.

7

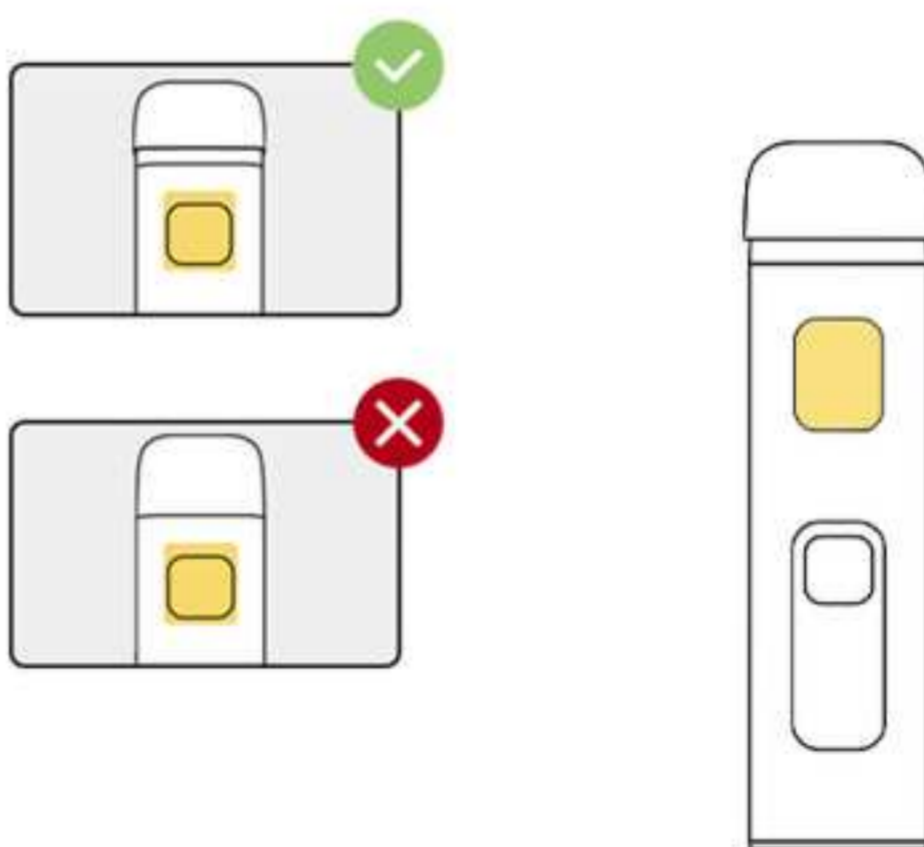

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

8

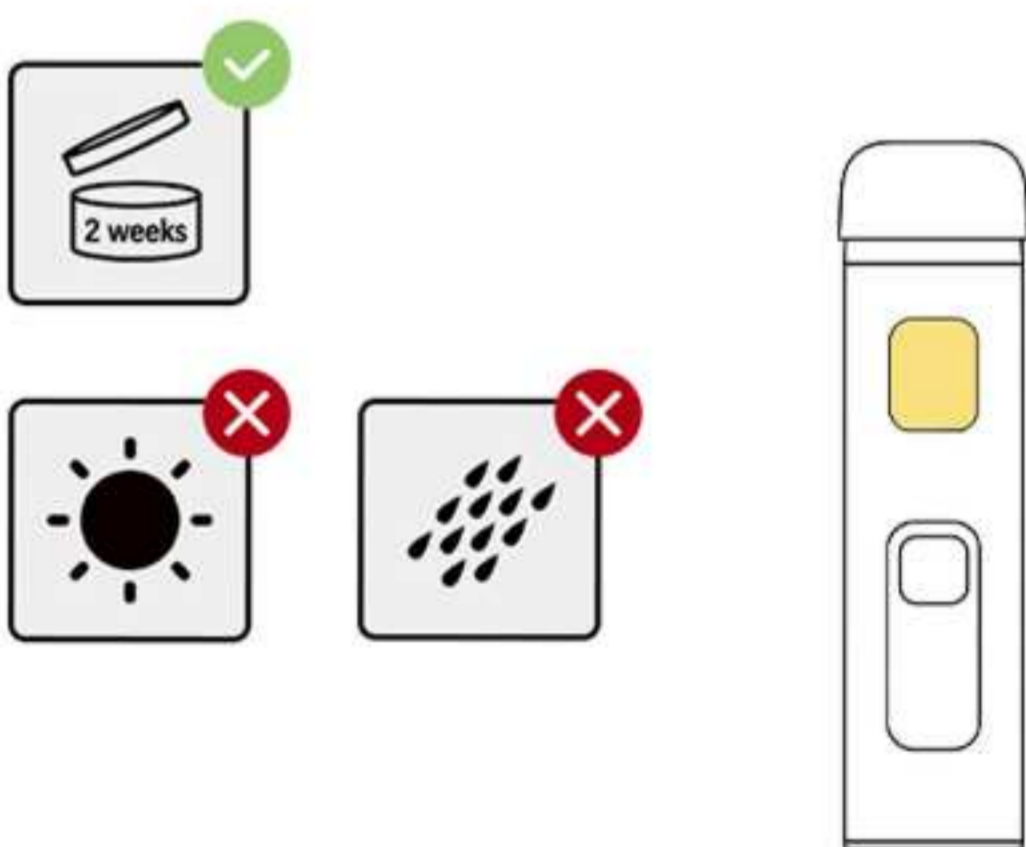






- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

For bulk filling and capping, it is recommended to use specialized tools and jigs to ensure precision. Contact us if needed.

Operating Instructions & Other Functions



Category	Function	Instruction	Screen display	Remarks
Operation	Start/Off	 5 Clicks in 2s	Keep on	Sceen lights on for 2s/1s when power is on/off.
	Pre-Heat	 2 Clicks in 2s	Count down from 6	Pre-heat lasts for 6s and can be stopped by clicking the button.
	Voltage Setting	 3 Clicks in 2s	Battery & Voltage Level H: High Mode ; L: Low Mode	Default Setting: High Mode.
	Inhalation	 Keep Pressing	Battery & Voltage Level	After releasing the button, screen remains on for 5s then goes off.
	Charging	 Plug in	Battery Level	Screen remains on for 10s then goes off when fully charged.
Other Functions	Overdose Protection (A puff $\geq 10 \pm 1.5s$)		P1	Device shuts down with screen displaying P1 for 2s then going off.
	Low Voltage Protection		0%	Device shuts down with screen displaying 0% for 2s then going off.
	Short-Circuit Protection		P2	Device shuts down with screen displaying P2 for 2s then going off.



<https://ciliconplus.shop>

✉ info@ciliconplus.com

📷 [@cilicon.official](https://www.instagram.com/cilicon.official)

✂ [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📘 [@ciliconofficial](https://www.facebook.com/ciliconofficial)

in [@cilicon](https://www.linkedin.com/company/cilicon)
