

EDGE Nano2

User Manual


1.0mL

Disposable



Specifications


Dimension(mm)	φ10.5*63.6mm (flat mouthpiece) φ10.5*53.6mm (round mouthpiece)
Tank Material	Glass
Central Post	Medical-Grade SUS316L Stainless Steel
Resistance	1.5Ω
Tip Type	Snap In

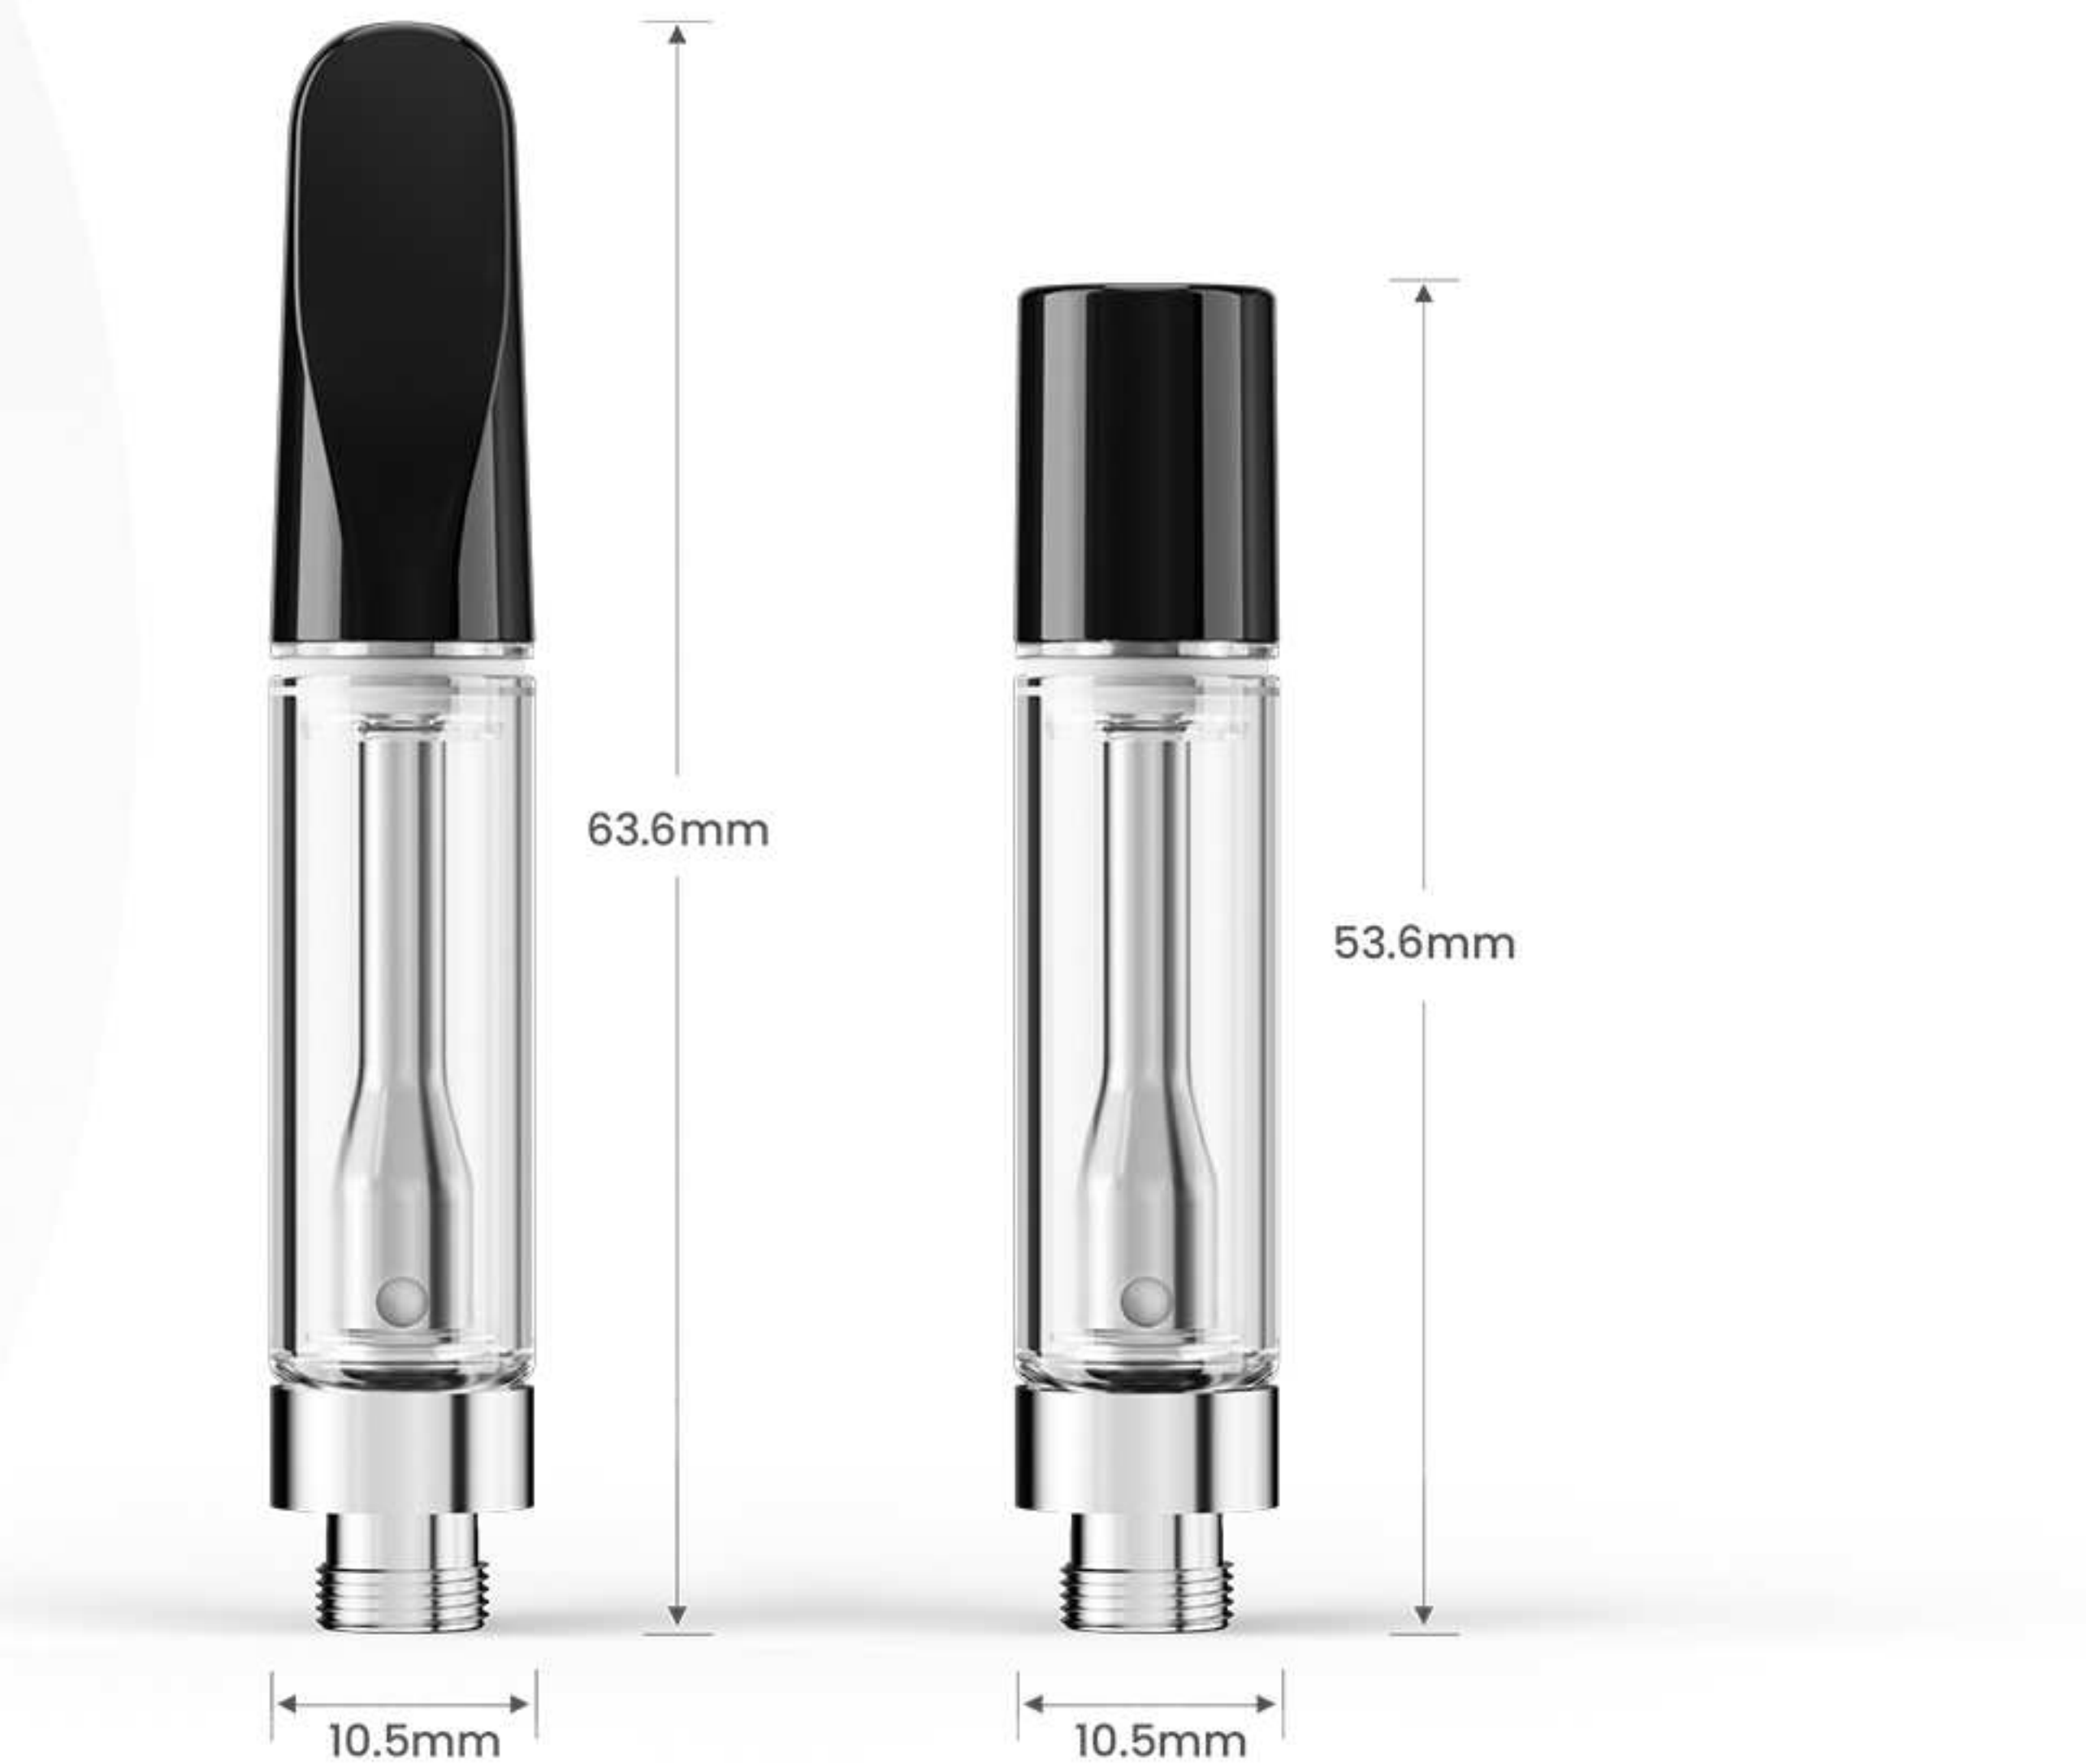

Filling Instruction


cilicon⁺

1

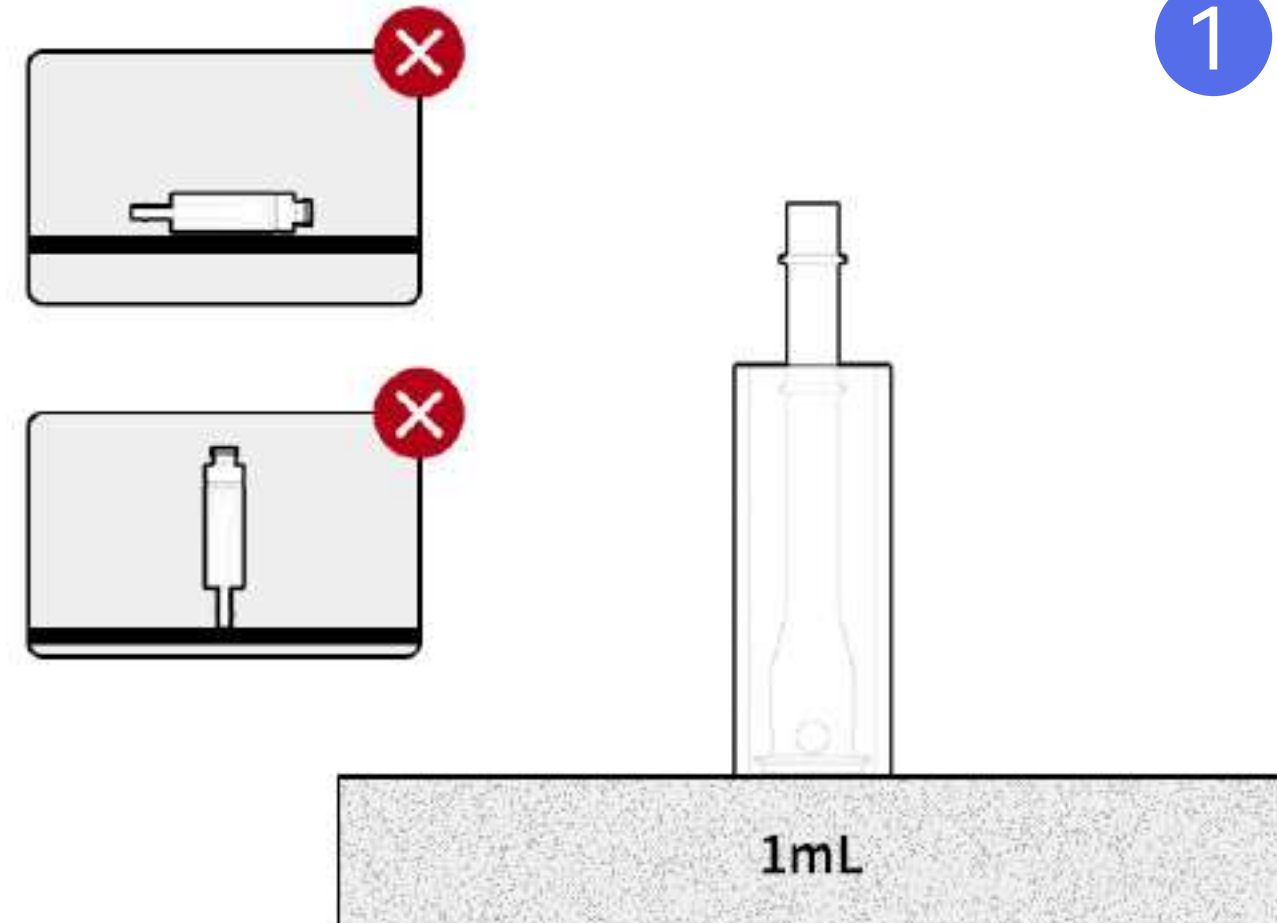


- Unpackge the cartridge and make sure it is vertically upright with the tray.

2

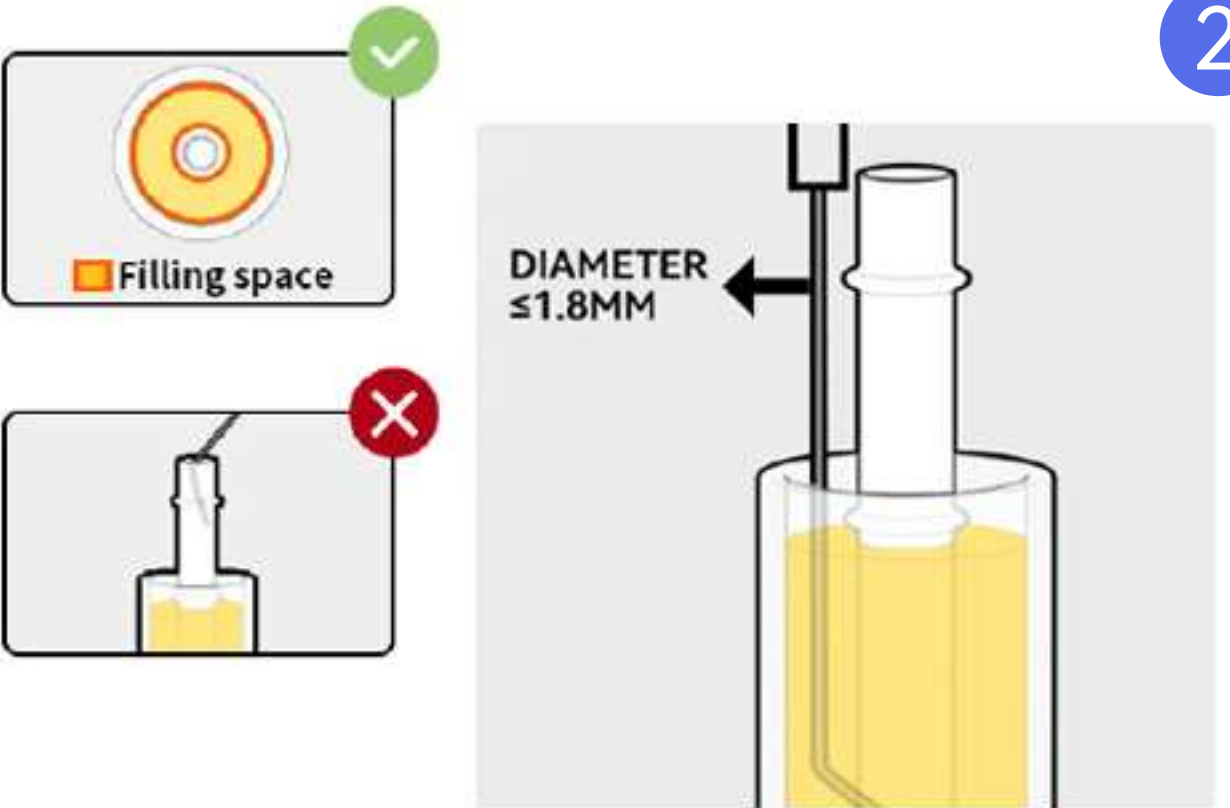


- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling space, and do not insert it into the central tube.
- Make sure the needle diameter is $\leq 1.8\text{mm}$.

3

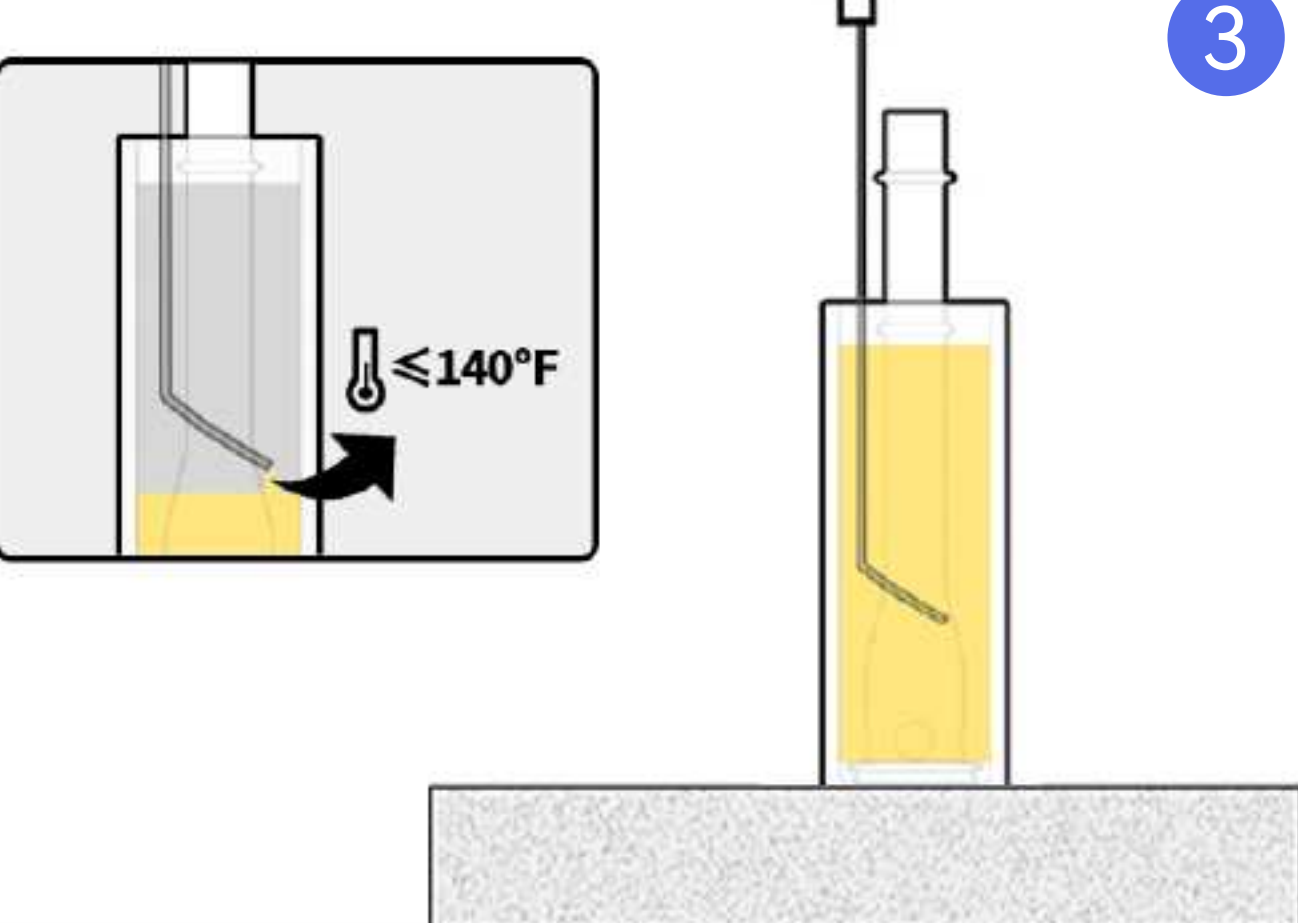


- The output temperature must be under 140°F.

4

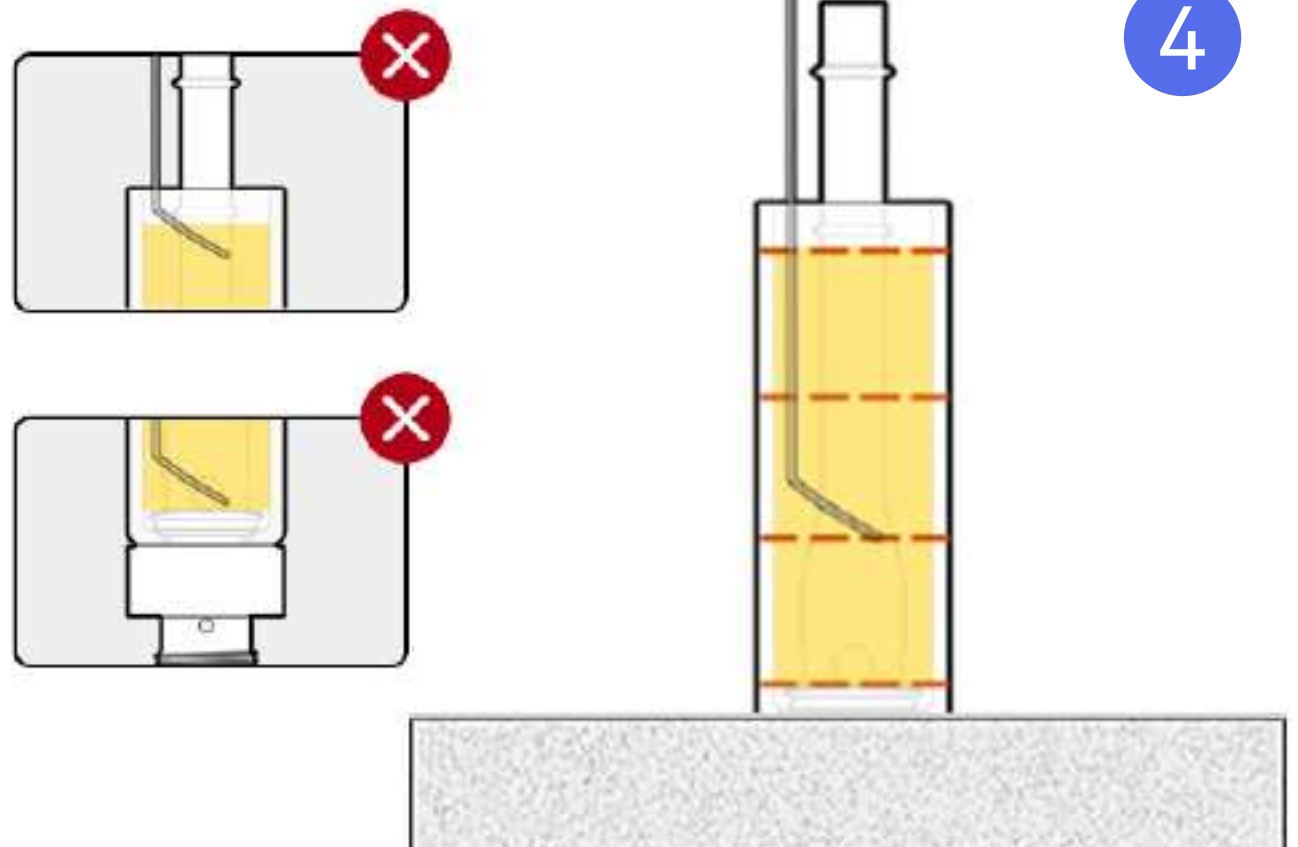


- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank
- Fill in 0.95-1.0mL for this device.

5

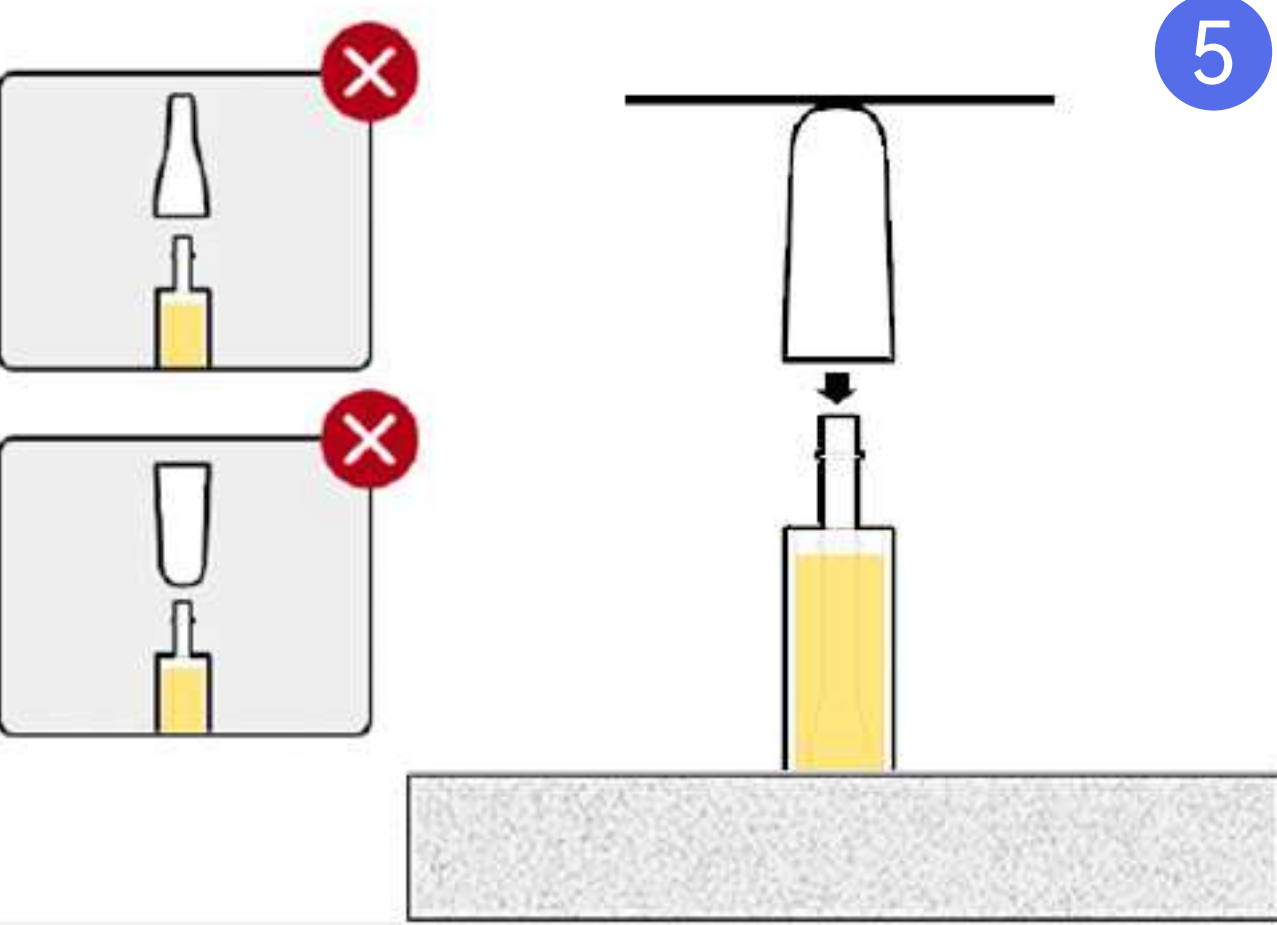


- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.

6

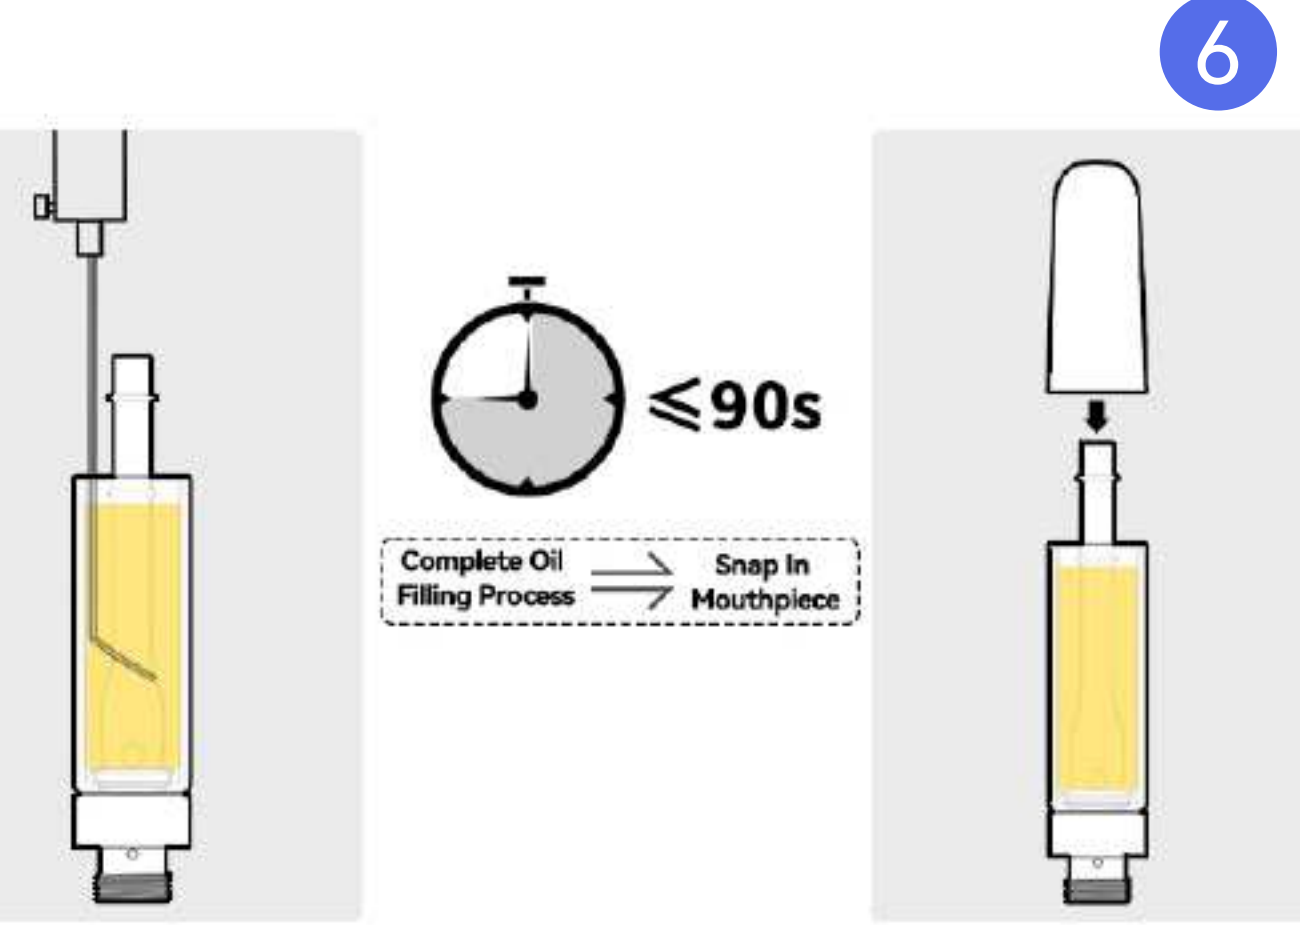


- Complete the snapping process within 90s after filling the oil.

7

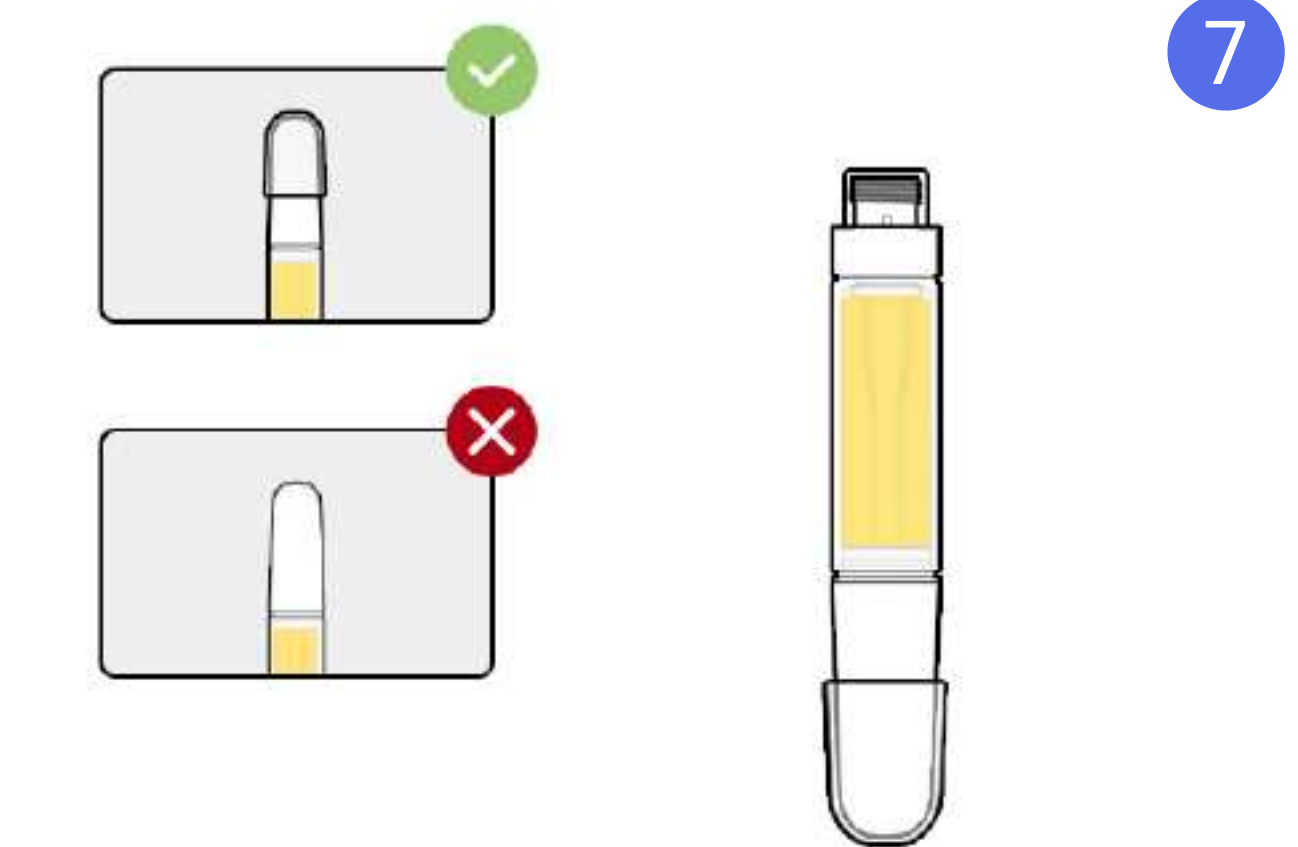

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

8

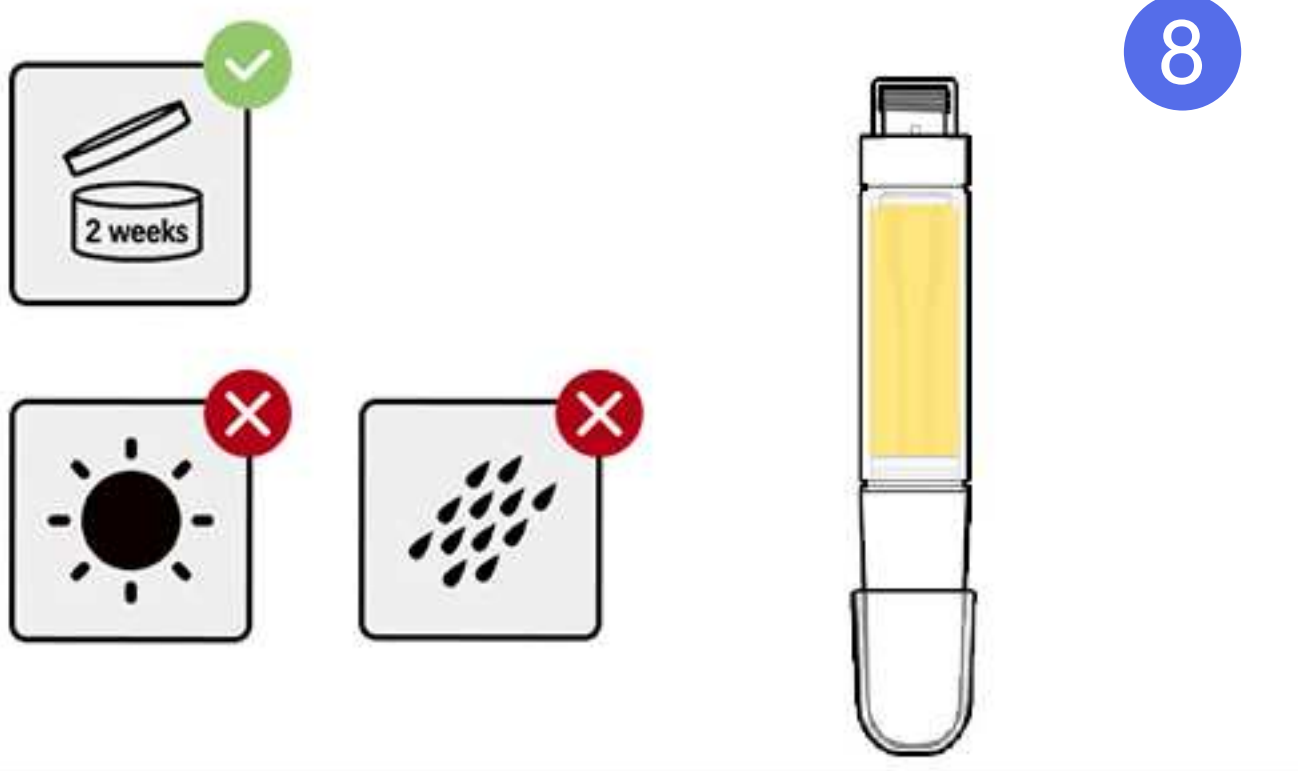

- Store the device upside down, with the mouthpiece facing down.
- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

For bulk filling and capping, it is recommended to use specialized tools and jigs to ensure precision. Contact us if needed.



<https://ciliconplus.shop>

✉ info@ciliconplus.com

📷 [@cilicon.official](https://www.instagram.com/cilicon.official)

✂ [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📘 [@ciliconofficial](https://www.facebook.com/ciliconofficial)

📌 [@cilicon](https://www.linkedin.com/company/cilicon)
