

cilicon⁺

POCKIE

User Manual

1.0mL

Disposable




Specifications

Dimension(mm)	Round Mouthpiece: φ10.5mm*112.7mm Flat Mouthpiece: φ10.5mm*123.2mm
Tank Material	Glass
Central Post	Medical-Grade SUS316L Stainless Steel
Output Power	8.2W
Resistance	1.5Ω
Battery Capacity	190mAh
Charging	USB Type-C
Activation	Inhale Activated
Tip Type	Snap In




Filling Instruction

CILICON⁺

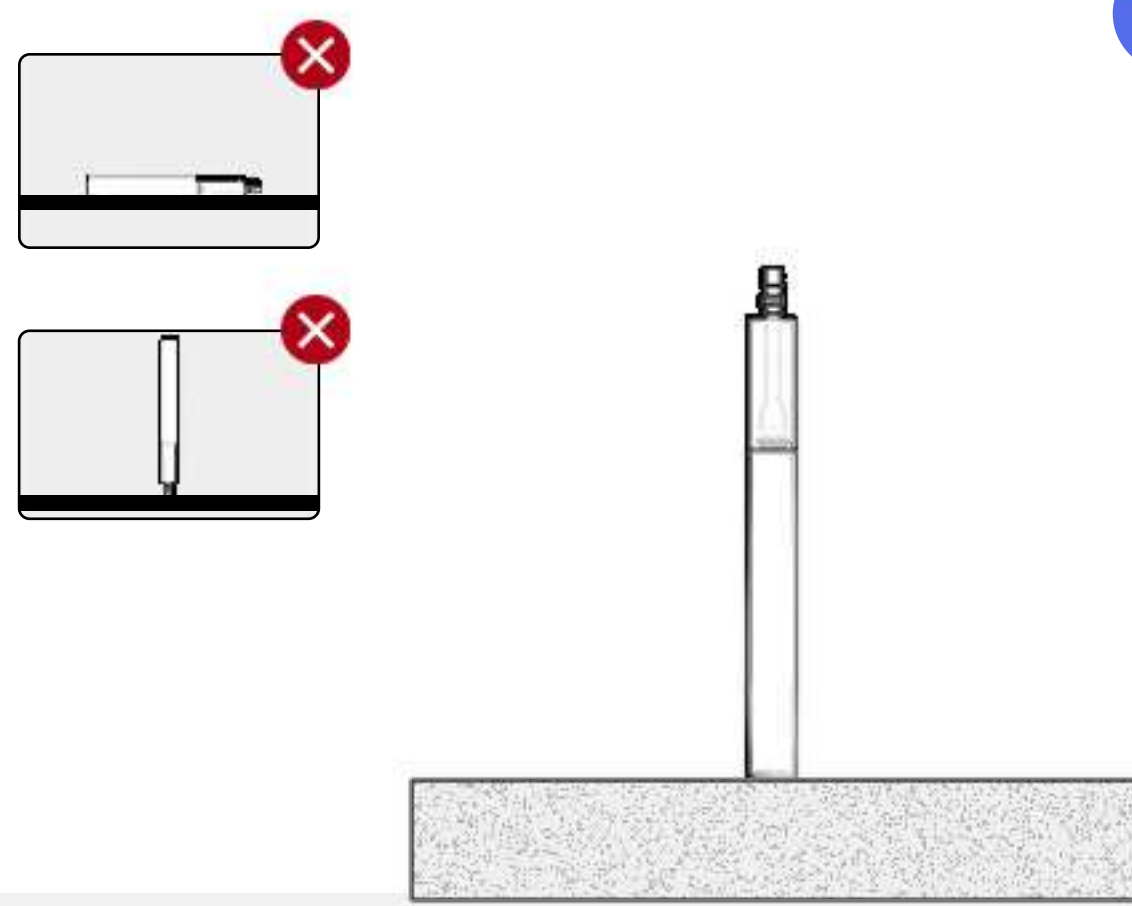


1

- Unpack the device, and make sure it is vertically upright with the tray.

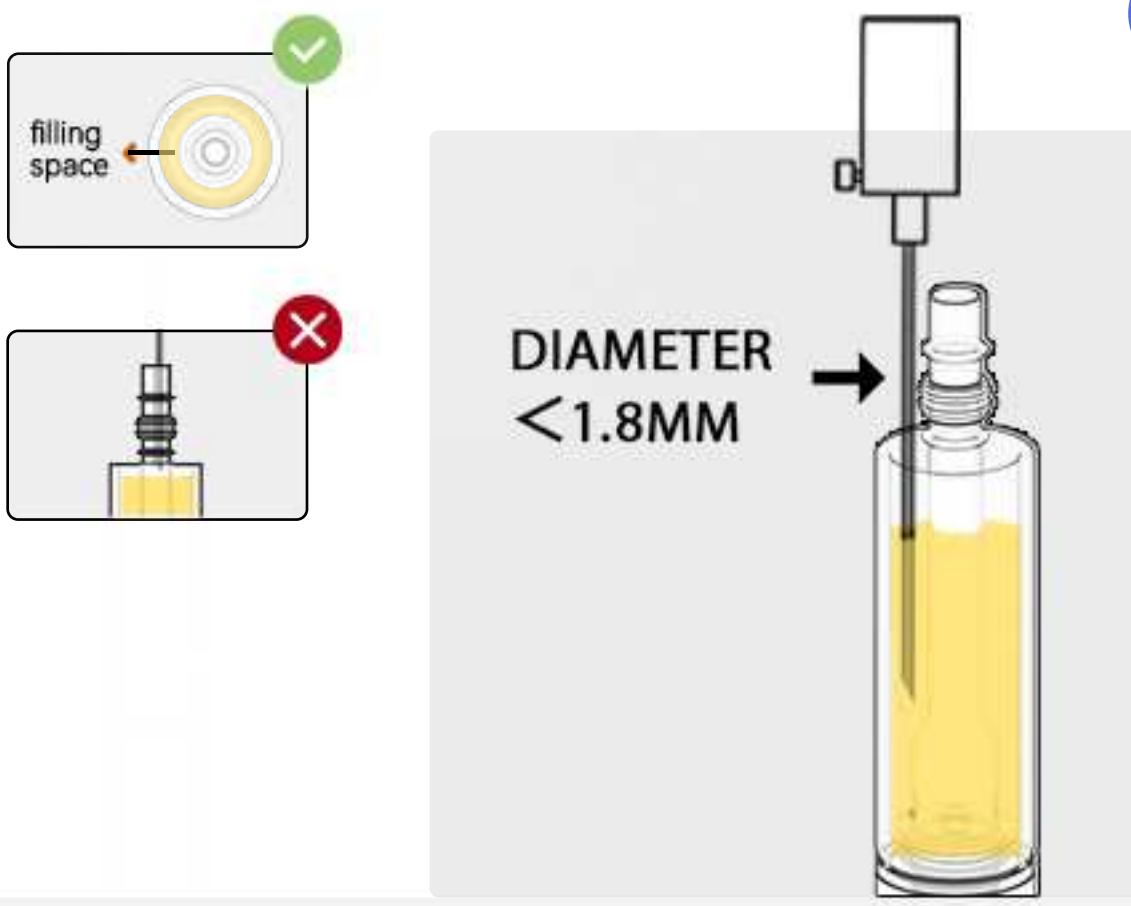


2

- Make sure the needle diameter is < 1.8mm.
- Insert the needle appropriately.

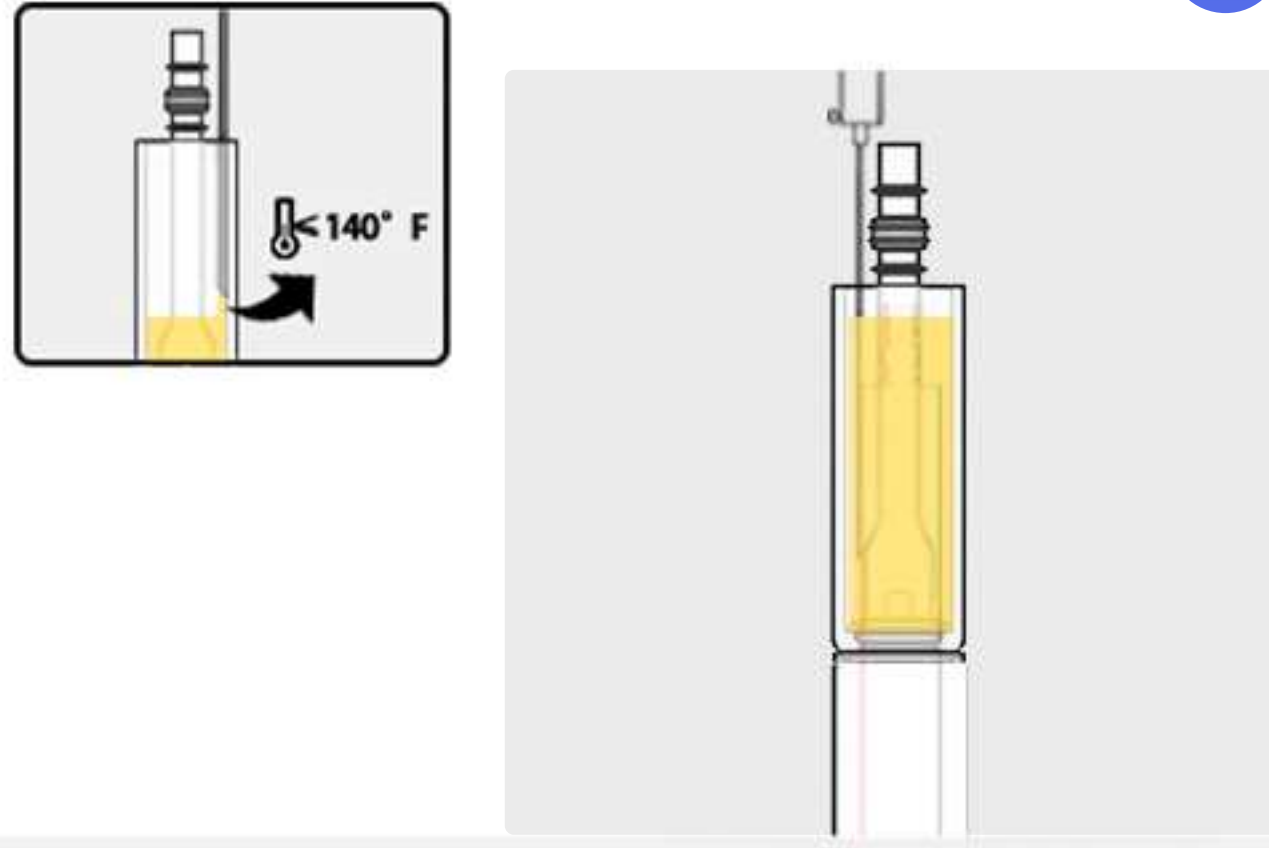


3

- The output temperature must be under 140°F.

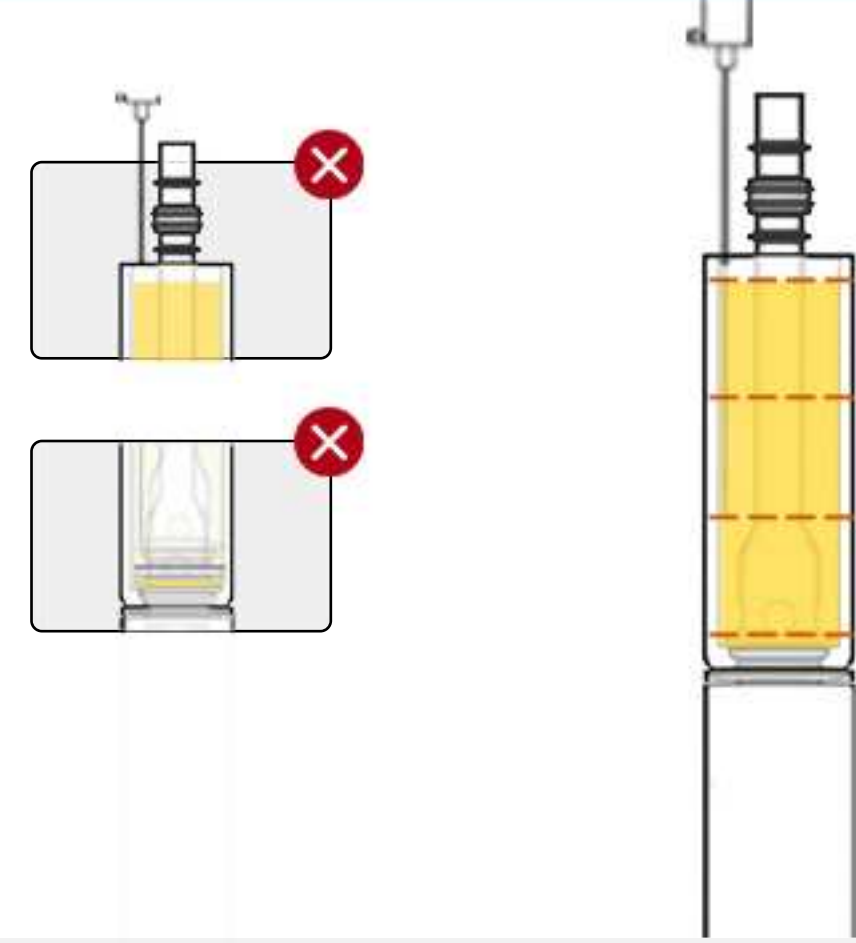


4

- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Fill in 0.95-1.0 mL for this device.

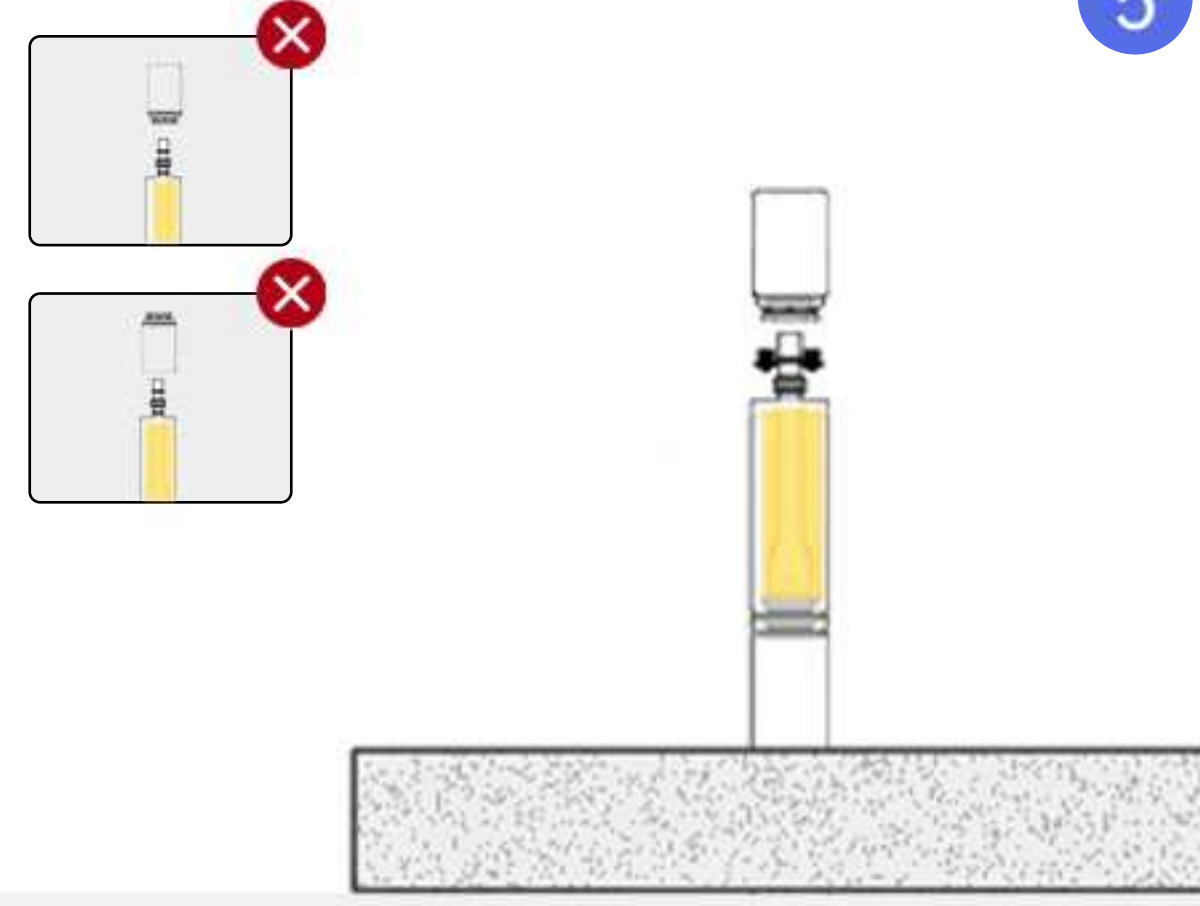


5

- Complete the snapping process within 90s after filling the oil.

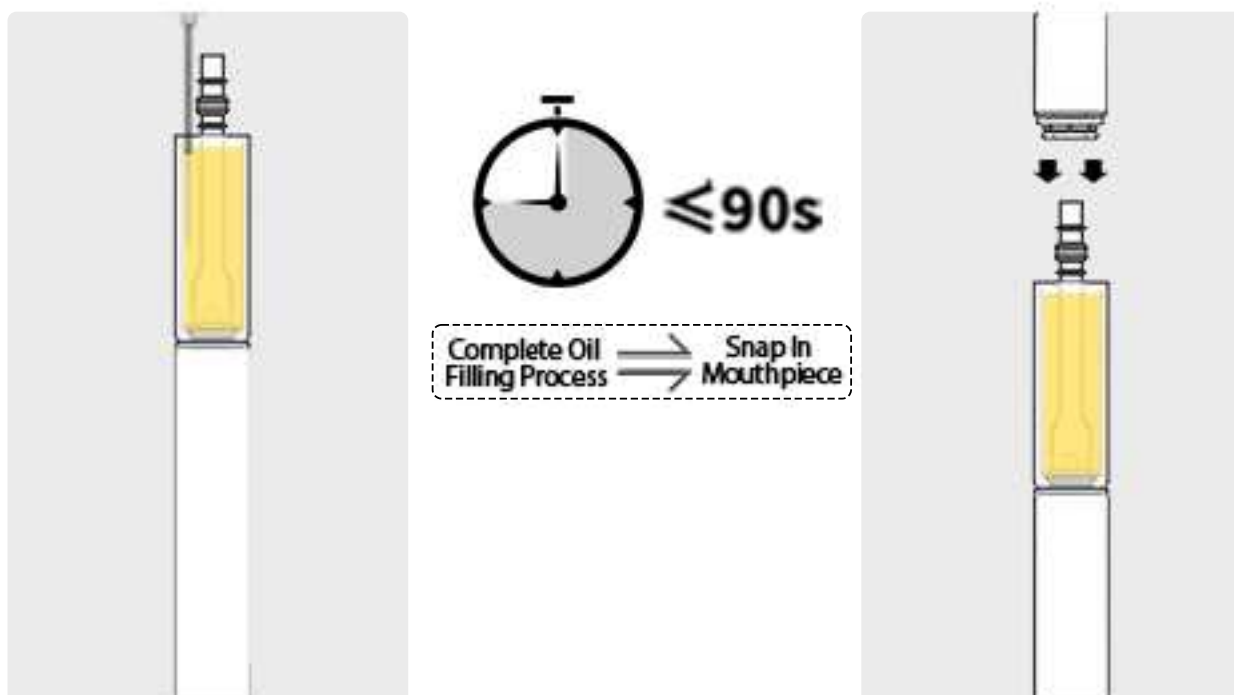


6

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

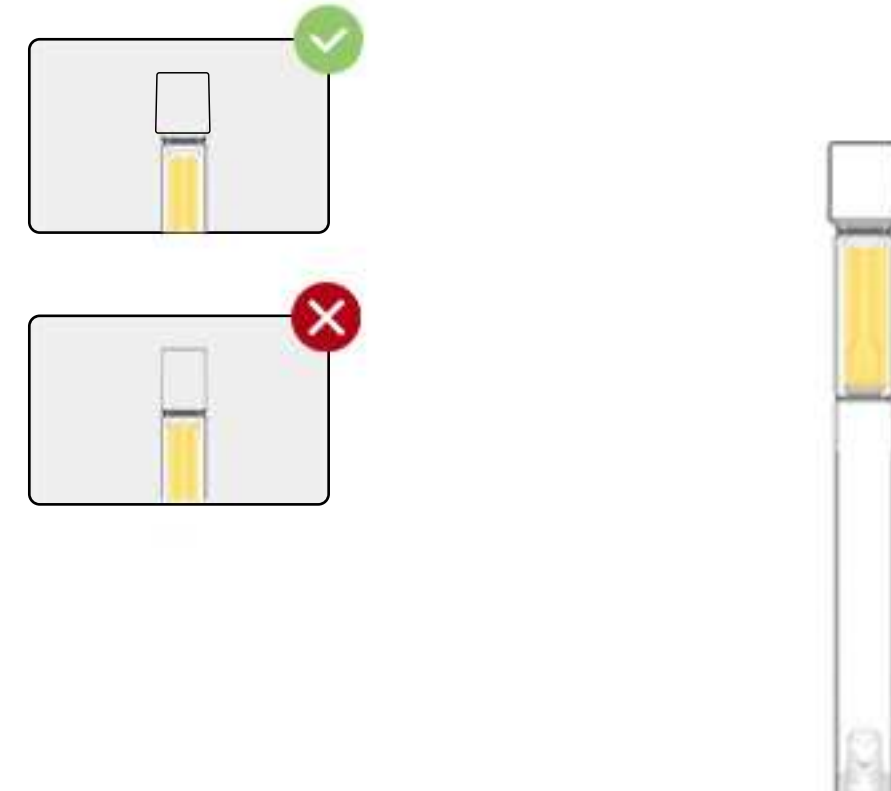

7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

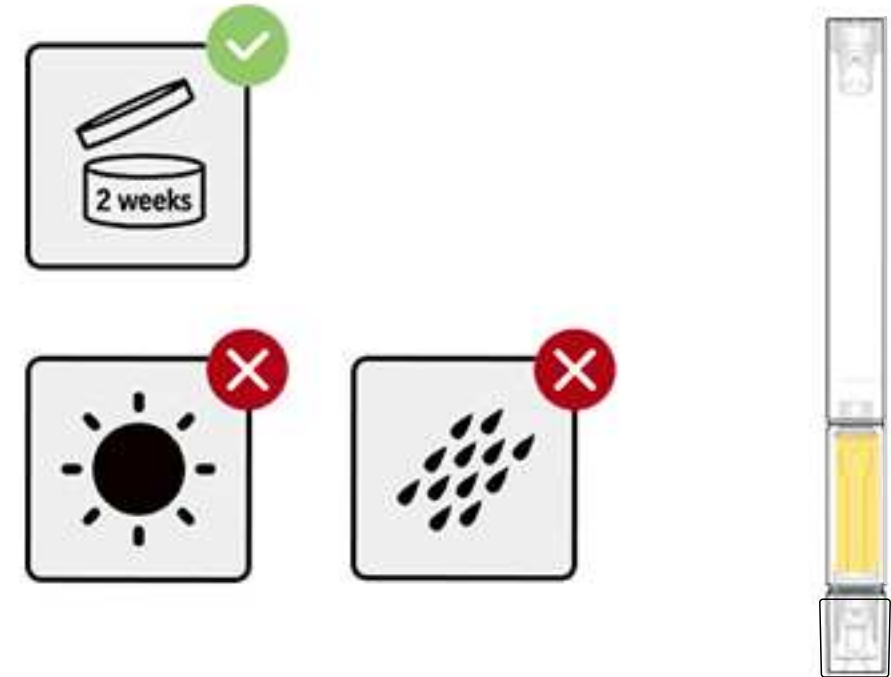



8

- It is recommended to store the device upside down (with the mouthpiece facing downward).
- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

For bulk filling and capping, it is recommended to use specialized tools and jigs to ensure precision. Contact us if needed.

Operating Instructions & Other Functions



Category	Function	Instruction	LED Indicator	Remarks
Operation	Start	 Inhale	Lights Up	The light gradually turns down when stop vaping.
	Charging	 Plug in	On: Charging Off: Fully Charged 3 Blinks: Unplugging	
Other Functions	Overdose Protection (A puff \geq 10s)		2 Blinks	Device stops output after the light blinks.
	Low Voltage Protection		10 Blinks	Device stops output after the light blinks.
	Short-Circuit Protection		Stays on for 2s	A breakdown occurs. Device stops output.



<https://ciliconplus.shop>

✉ info@ciliconplus.com

📷 [@cilicon.official](https://www.instagram.com/cilicon.official)

✂ [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📘 [@ciliconofficial](https://www.facebook.com/ciliconofficial)

in [@cilicon](https://www.linkedin.com/company/cilicon)
