

# SOLO 2

User Manual

2.0mL

Disposable





# Specifications


Dimension(mm)	116.5H*21.6W*9.1D
Tank Material	Food Grade PCTG
Central Post	Medical Grade SUS316L Stainless Steel
Battery Housing	Aluminum Alloy
Output Power	H: 8.2W / M: 6.8W / L: 5.2W
Resistance	1.5Ω
Battery Capacity	300mAh
Charging	Micro USB
Activation	Inhale Activated
Tip Type	Snap In



# Filling Instruction


CILICON<sup>+</sup>

1

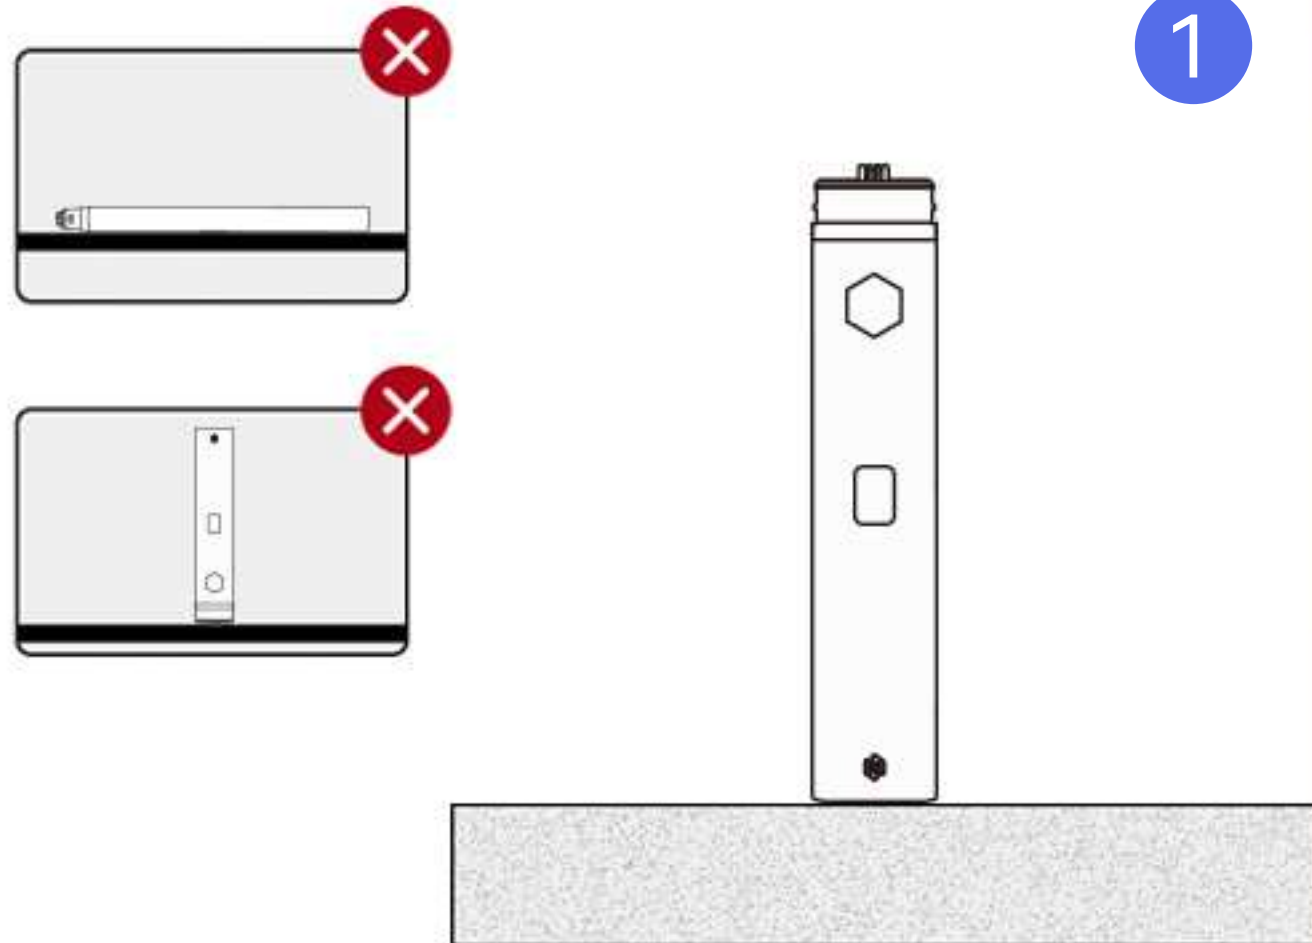


- Unpackge the cartridge and make sure it is vertically upright with the tray.

2

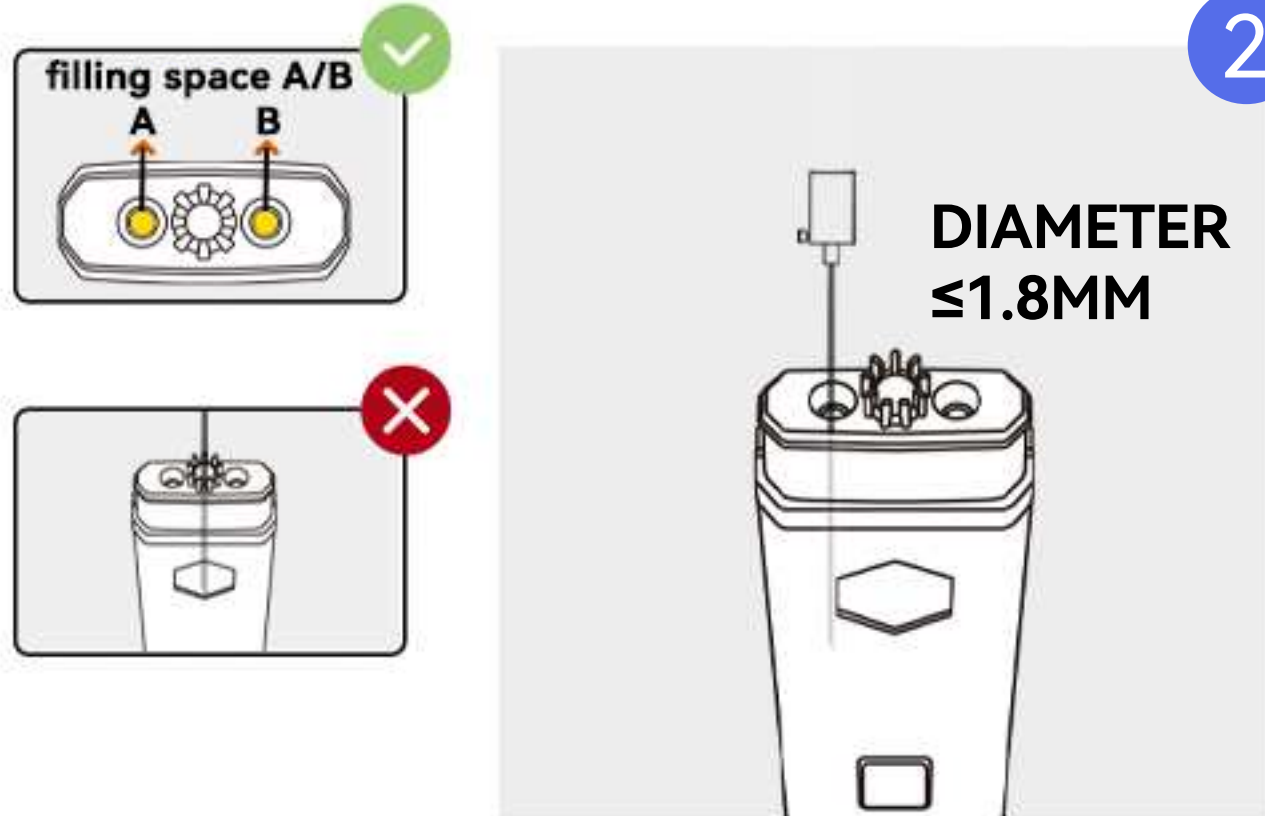


- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into the filling space (A/B), and do not insert it into the air outlet.
- Make sure the needle diameter is  $\leq 1.8\text{mm}$ .

3

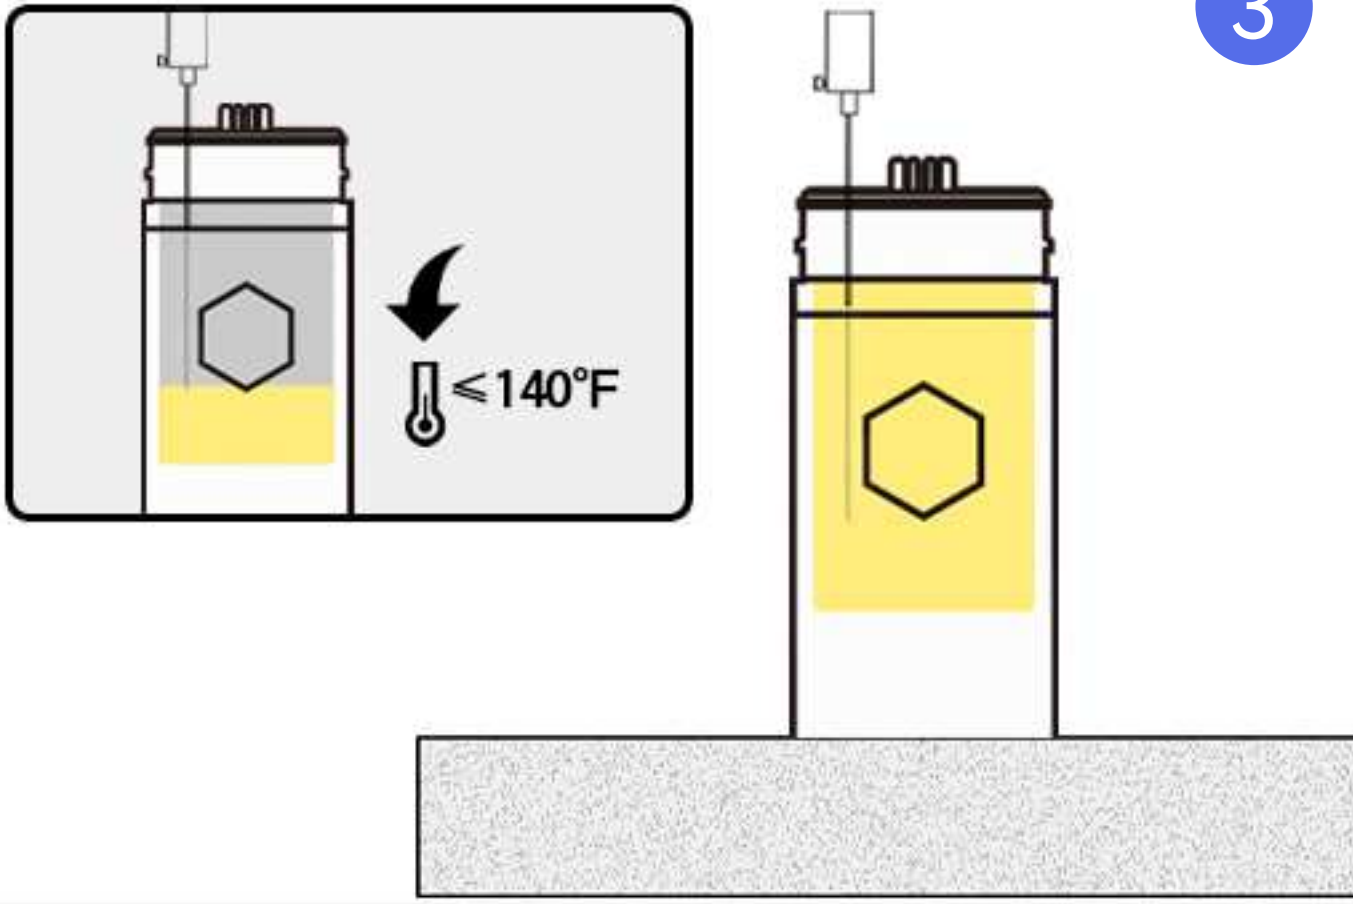


- The output temperature must be under 140°F.

4

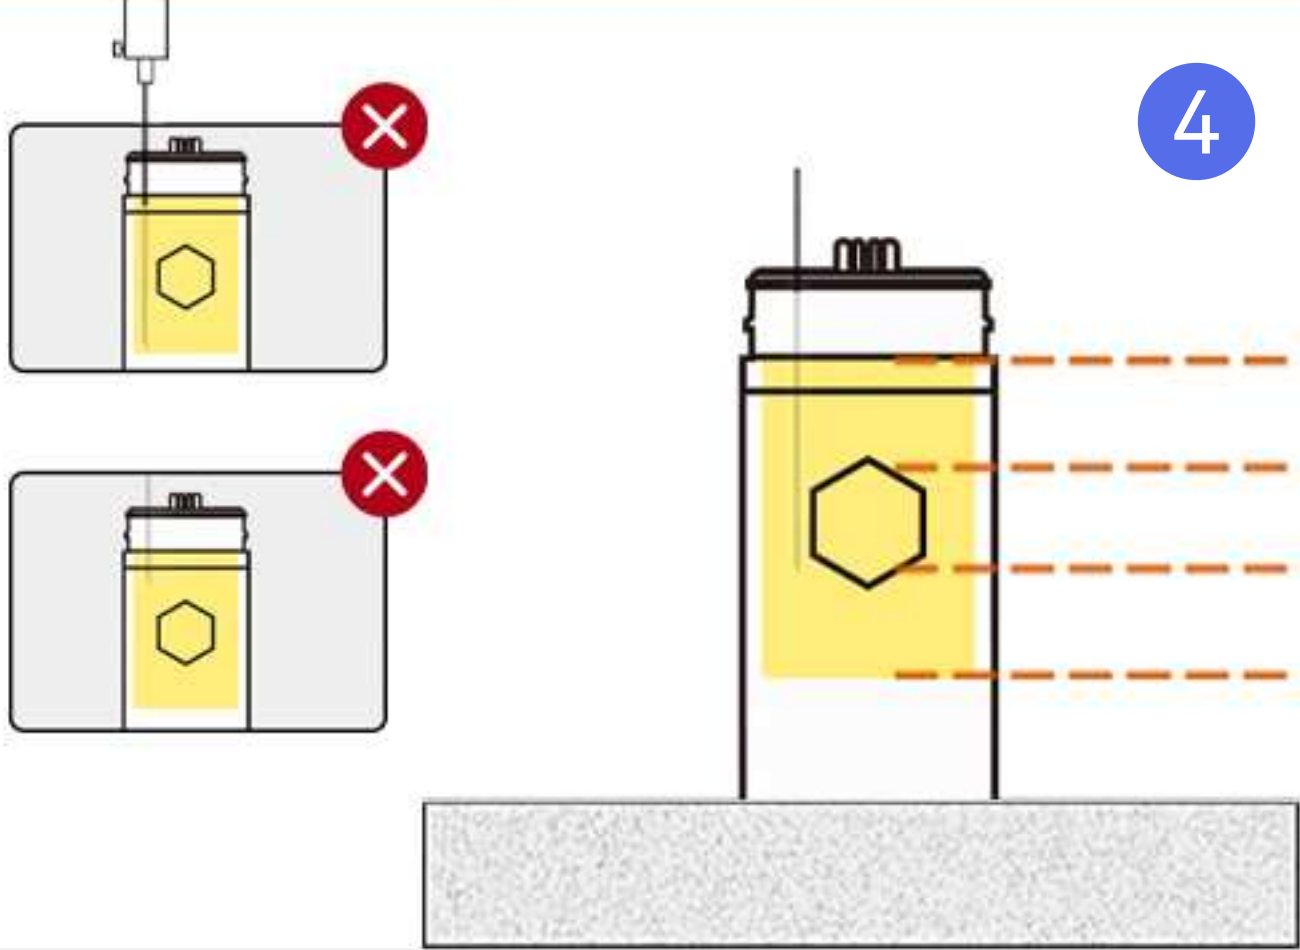


- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank
- Fill in 1.95-2.0mL for this device.

5

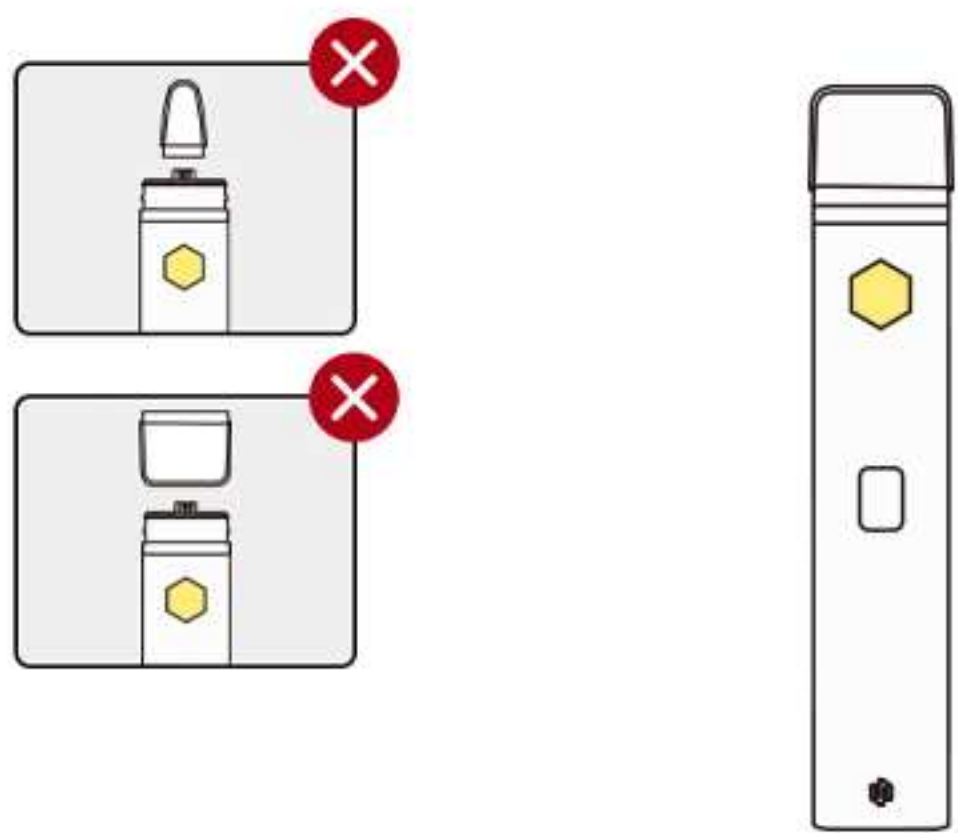


- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.

6

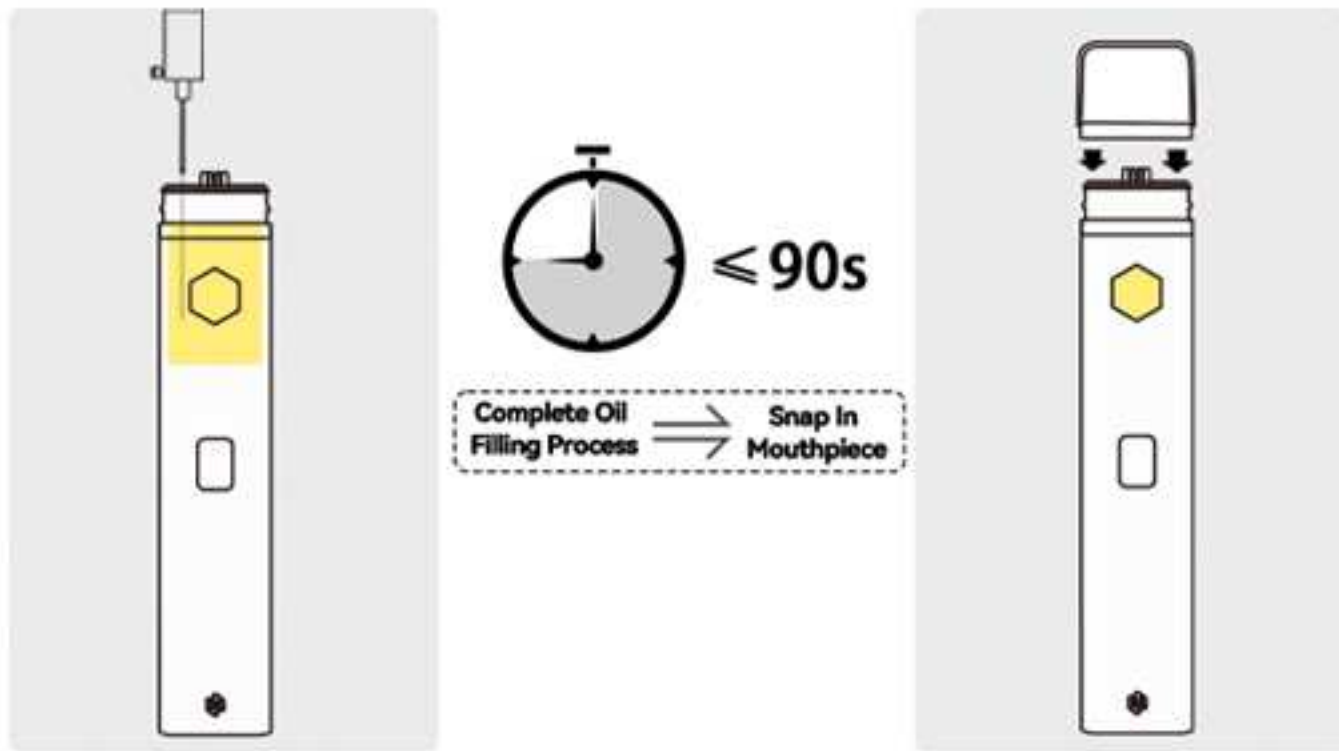


- Complete the snapping process within 90s after filling the oil.

7

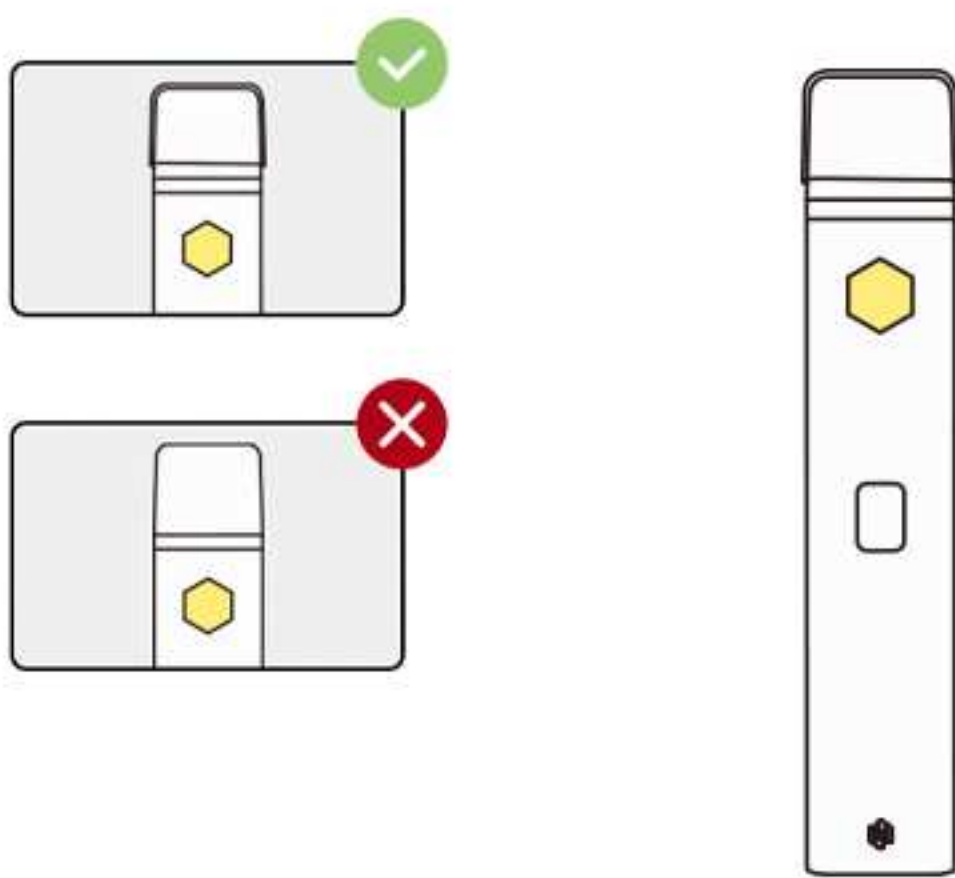

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

8

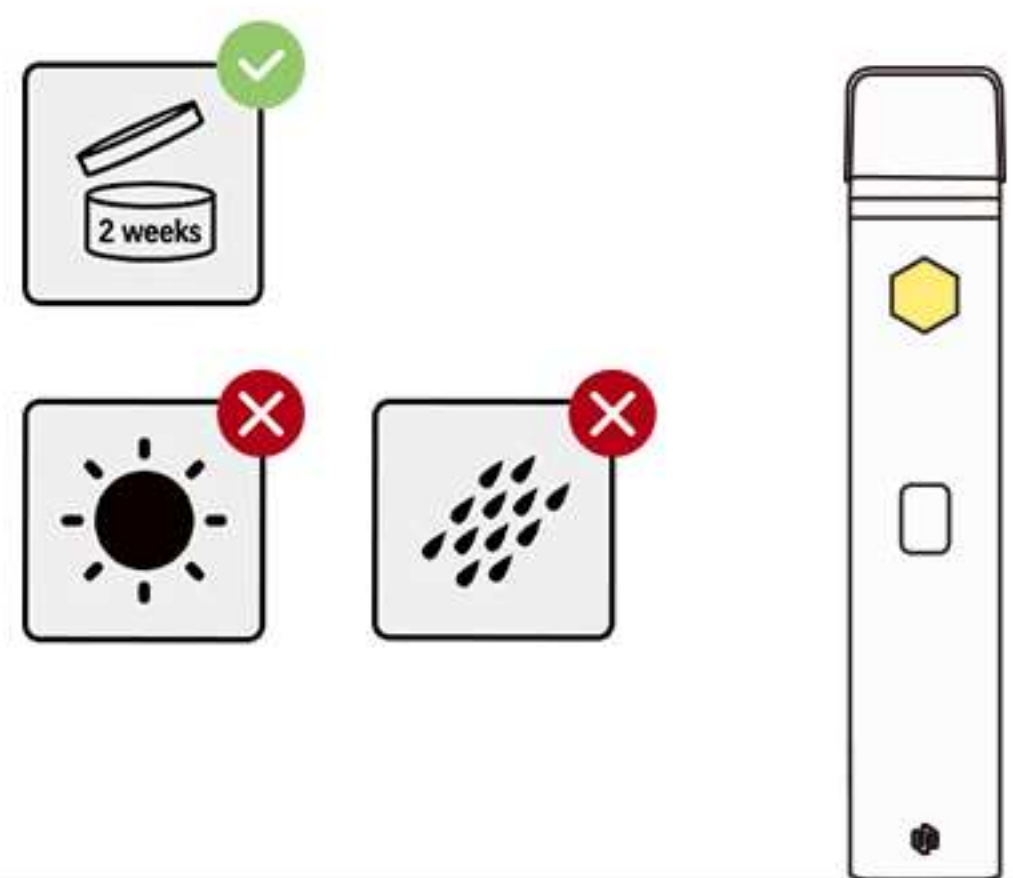






- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

For bulk filling and capping, it is recommended to use specialized tools and jigs to ensure precision. Contact us if needed.



# Operating Instructions & Other Functions



Category	Function	Instruction	LED Indicator	Remarks
Operation	Start/Off	 5 Clicks in 2s	2 Blinks	/
	Pre-Heat	 2 Clicks in 2s	Stays on for 6s	Pre-heat lasts for 6s and can be stopped by clicking the button.
	Voltage Setting	 3 Clicks in 2s	High: 3 Blinks Mid: 2 Blinks Low: 1 Blinks	/
	Inhalation	 Keep Pressing	Stays on	/
	Charging	 Plug in	Charing: stays on Fully Charged: stays on for 1min Unplugged: 3 blinks	/
Other Functions	Overdose Protection (A puff $\geq$ 10s)		2 Blinks	Device stops output after the indicator blinks.
	Low Voltage Protection		10 Blinks	Device stops output after the indicator blinks.
	Short-Circuit Protection		Stays on for 2S	A breakdown occurs. Device stops output.





<https://ciliconplus.shop>

---

✉ [info@ciliconplus.com](mailto:info@ciliconplus.com)

📷 [@cilicon.official](https://www.instagram.com/cilicon.official)

✂ [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📘 [@ciliconofficial](https://www.facebook.com/ciliconofficial)

in [@cilicon](https://www.linkedin.com/company/cilicon)

---