

# EDGY

Cross The Edge, Cross The Limit

1.0mL

Disposable




## Specifications

Dimension(mm)	89.8H*23.5W*12.0D
Tank Material	Food Grade PCTG
Central Post	Medical Grade SUS316L Stainless Steel
Battery Housing	AL6063 Aluminum Alloy
Output Power	7.7W
Resistance	1.5Ω
Battery Capacity	290mAh
Charging	USB Type-C
Activation	Inhale Activated
Tip Type	Snap In



# Filling Instruction

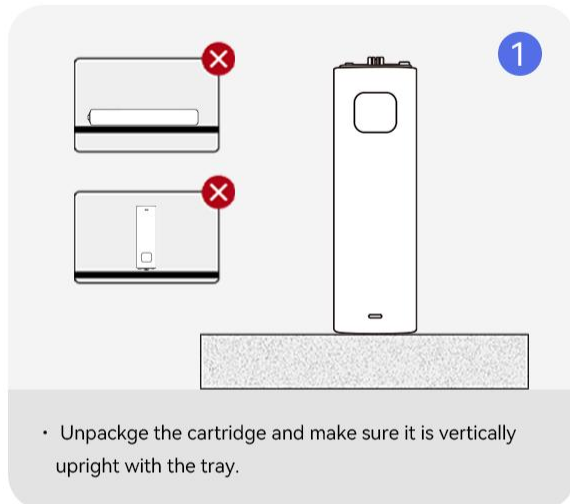


1

- Unpackge the cartridge and make sure it is vertically upright with the tray.




2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle vertically into the filling hole, and do not insert it into the central post.
- Make sure the needle diameter is  $\leq 1.8\text{mm}$ .

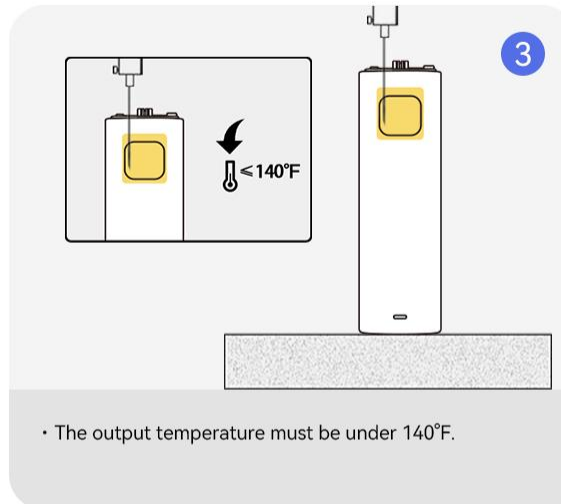


3

- The output temperature must be under  $140^{\circ}\text{F}$ .

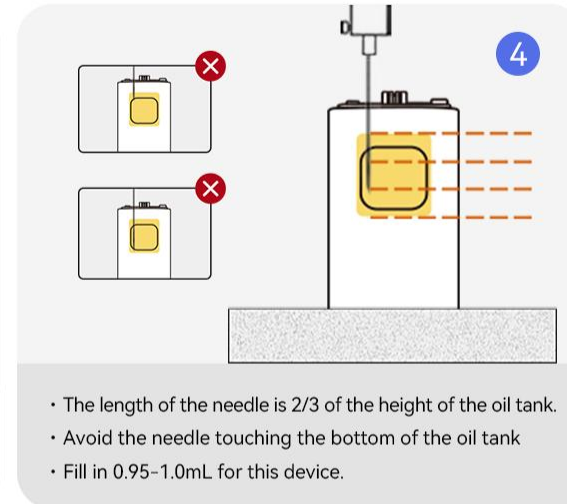


4

- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank
- Fill in 0.95-1.0mL for this device.

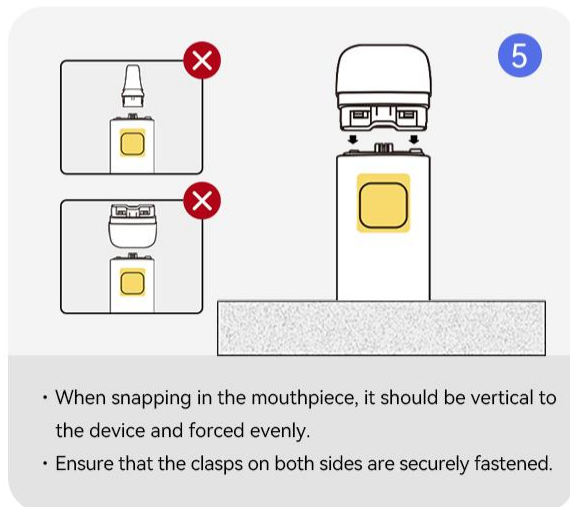


5

- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.
- Ensure that the clasps on both sides are securely fastened.

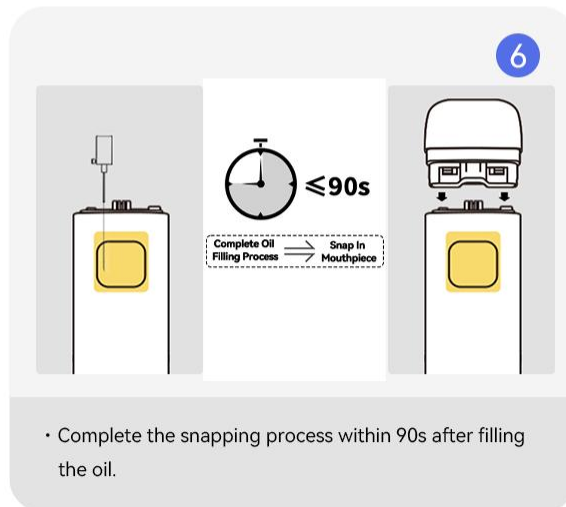


6

- Complete the snapping process within 90s after filling the oil.

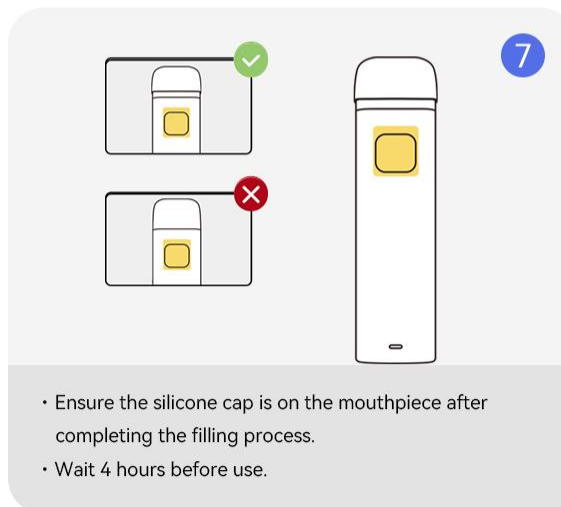

7



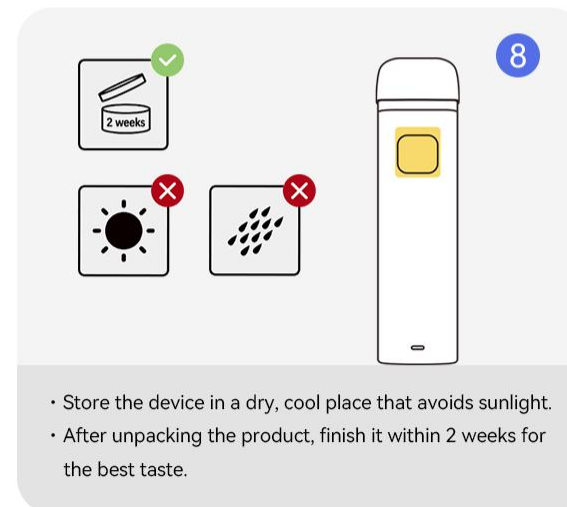


- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.



8

- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

# Operating Instructions & Other Functions

Category	Function	Instruction	The LED Indicator	Tips
Operation	Start	 Inhale	Lights Up	The light turns down when stop inhaling.
	Charging	 Plug in	On: Charging Off: Fully Charged 3 Blinks: Unplugging	
Other Functions	Overdose Protection	 A Puff $\geq 10s$	2 Blinks	The device shuts down after the light blinks.
	Low Voltage Protection	 Inhale	10 Blinks	The device shuts down after the light blinks.
	Short-Circuit Protection	 Inhale	2 Blinks	A breakdown occurs, the device shuts down after the LED indicator is off.



<https://ciliconplus.shop>

---

✉ [info@ciliconplus.com](mailto:info@ciliconplus.com)

📷 [@cilicon.official](https://www.instagram.com/cilicon.official)

✕ [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📘 [@ciliconofficial](https://www.facebook.com/ciliconofficial)

in [@cilicon](https://www.linkedin.com/company/cilicon)

---